



Instruction Manual

FRM-NOC

1. Target group

This manual is intended for personnel qualified in gas safety and regulation technology, as well as personnel trained or instructed by them.

The former are in a position to judge the work assigned to the latter on the basis of their technical training, knowledge and experience, as well as knowledge of the relevant regulations, and are able to recognise potential dangers. Only they are permitted to carry out assembly, commissioning, settings and maintenance on the devices in compliance with the recognised rules for occupational safety.



Hang this instruction manual in a clearly visible place inside the installation room! Do not carry out any work until you have read the safety instructions of this instruction manual and are qualified to do so.

2. Warnings

2.1 General warnings



The recognised occupational safety rules and accident prevention regulations must be observed and, if necessary, personal protective measures must be taken.



All adjustments and settings should only be performed in accordance with the instruction manuals of the connected machines.



Never carry out work as long as gas pressure or voltage is applied. Avoid naked flames. Please observe public regulations.



Prior to assembly, the device must be inspected for transport damage.



ок?

DUNGS⁶

The device may only be operated in compliance with the operating conditions stated on the type plate.

Protection from environmental

(corrosion, rain, snow, icing,

impacts and weather conditions

humidity (e.g. by condensation),

be guaranteed. Depending on the

to take protective measures.

mould, UV radiation, harmful insects, poisonous, corrosive solutions/liquids

(e.g. cutting and cooling fluids), must

installation site, it may be necessary





The device must be protected from vibrations and mechanical impacts.



The device must not be exposed to naked flames. Protection against lightning strikes must be guaranteed.



The device must not be used in areas with increased seismic risk.



Connected line systems must be free from dirt and contamination.

Explanation of the symbols

Act based on 1, 2, 3,... the sequence Instruction



2.2 Designated use

The device is used in accordance with its designated use if the following instructions are observed:

- Use of the device in gas transport and gas distribution networks, commercial and industrial plants.
- Use in pressure regulator stations according to EN 12186 and EN 12279 or for use in gas piping systems according to NFPA 54 or CSA B149.1 or for use in gas trains according to NFPA 86, NFPA 37, NFPA 85 or CSA B149.3.
- Use with gases of the 1st, 2nd and 3rd gas families according to EN 437 only (e.g. manufactured gas (town gas),

- commercial grade natural gas and commercial grade LPG gases in the vaporized phase).
- Use with dry and clean gases only, no aggressive media.
- Use only in compliance with the operating conditions stated on the type plate.
- Use in perfect condition only.
- Malfunctions and faults must be eliminated immediately.
- Use only in observance of the instructions given in this instruction manual and of national regulations.

2.3 Risks in the case of misuse

- If used in accordance with their designated use, the devices are safe to operate.
- Non-observance of the regulations may result in personal injury or material damage, financial damage or environmental damage.
- Operator errors or misuse present risks to life and limb of the operators and also to the device and other material property.



3. EU Declaration of conformity

Produkt / Product Produit / Producto	FRM-NOC 100 (SAV 100025-100050/ SAV 10010-10020)	Medium Pressure Regulator 10 bar Safety shut-off valve 10 bar				
Hersteller / Manufacturer Fabricant / El Fabricante	Karl Dungs GmbH & Co. KG Karl-Dungs-Platz 1 73660 Urbach, Germany					
bescheinigt hiermit, dass die in dieser Übersicht genannten Produkte einer EU-Baumusterprüfung (Baumuster) unterzogen wurden und die wesentlichen Sicherheitsanforderungen der:	certifies herewith that the prod- ucts named in this overview were subjected to an EU-Type Exami- nation (production type) and meet the essential safety require- ments:	certifie par la présente que le produit mentionné dans cette vue d'ensemble a été soumis à un examen UE de type (type de fabrication) et qu'il est conforme aux exigences en matières de sécurité des dernières versions en vigueur de :	certifica que los productos men- cionados en este resumen han sido sometidos a un examen UE de tipo (tipo de producción) y cumplen con los requisitos mínimos de seguridad de:			
EU-Druckgeräterichtlinie 2014/68/EU	EU-Pressure Equipment Directive "2014/68/EU"	Directive européenne relative aux appareils sous pression 2014/68/UE	Directiva de equipos a presión de la UE 2014/68/UE			
in der gültigen Fassung erfüllen.	as amended.		en su versión vigente.			
Bei einer von uns nicht freigegebenen Änderung des Gerätes verliert diese Erklärung ihre Gültigkeit. Der oben beschriebene Gegenstand der Erklärung entspricht den einschlägigen Harmonisierungsrechtsvorschriften der Union. Die alleinige Verantwortung für die Ausstellung dieser Konformitätserklärung trägt der Hersteller.	In the event of an alteration of the equipment not approved by us this declaration loses its validity. The object of the declaration described above conforms with the relevant Union harmonisation legislation. This declaration of conformity is issued under the sole responsibility of the manufacturer.	Ce communiqué n'est plus valable si nous effectuons une modification libre de l'appareil. L'objet décrit ci-dessus de la présente déclaration correspond aux prescriptions légales applicables en matière d'harmonisation de l'Union. Le fabricant porte l'entière responsabilité pour l'établissement de la présente déclaration de conformité.	En caso de una modificación no autorizada por nosotros, esta declaración pierde su validez. El objeto de la declaración descrita anteriormente es conforme a la legislación de armonización pertinente de la Unión. El fabricante es el único responsable de la expedición de esta declaración de conformidad.			
Base d'essai de l'examen UE de	Type Examination (production type)	DIN EN 334 (DIN EN 1	4382*)			
Bescheinigung Attestation Certificat Certificado		CE-0085CP0256 (CE-0085DP0221*)				
Notifizierte Stelle (EU Baumuste Notified Body (EU type-examina Organisme notifié (Examen de ty Organismo notificado (Examen t	ition: Module B) /pe de l'UE: module B)	DVGW CERT GmbH Josef-Wirmer-Straße 1-3 D-53123 Bonn, Germany Notified Body number: 0085				
Überwachung des QM-Systems Monitoring of the QM system (m Contrôle de la gestion de l'assur Supervisión del sistema de calid	odule D) rance qualité (module D)	TÜV SÜD Industrie Service GmbH Westendstraße 199 D-80686 München, Germany Notified Body number: 0036				
B. Sc., MBA, Simon P. Dungs Geschäftsführer / Chief Operating O Directeur / Gerente Urbach, 2024-08-14	Officer	S.Dun				

 Gültig für angebautes SAV Valid for attached SAV Entre parenthèses valavble pour SAV montré Tra parentesi valido per SAV mantato





3. Declaration of conformity

Product	FRM-NOC 100	Medium Pressure Regulator 10 bar					
lanufacturer Karl Dungs GmbH & Co. KG · Karl-Dungs-Platz 1 · D-73660 Urbach/Germany							
essential safety requiremen		bjected to a Type Examination (production type) and meet the 05 (as amended by UKSI 2019: 969)					
The object of the declaration	of the equipment not approved by us thin described above conforms with the relaty is issued under the sole responsibility	levant legislation.					
Specified requirements of	the Type Examination (production typ	DIN EN 334 DIN EN 14382					
Term of validity		2032-07-13					
Approved Body		2016 No. 1105 TUV SUD BABT Unlimited Octagon House, Concorde Way, Segensworth North, Fareham, Hampshire, PO15 5RL, United Kingdom Approved Body Number: 0168					
Monitoring of the QA syste	em	Conformity process adopted: Module B+D					
B.Sc., MBA Simon P. Dungs, Chief Operating Officer Urbach, 2024-08-14		S.Duys					

5. Duys



4. Table of contents

1.		et group	1
2.	Warn	nings	1
	2.1	General warnings	1
	2.2	Designated uses	2
	2.3		2
3.	Decla	aration of conformity	2 2 3 5
4.		e of contents	5
5.	Abbro	reviations	6 7 7
6.	Featu	ures	7
	6.1	Technical data	7
	6.2	Nomenclature	8
	6.3	Adjustment ranges	9
	6.4	Accuracy class / closing pressure class	11
	6.5	Selection of regulating spring	12
		6.5.1 For FRM-NOC 10010/10015/100025	12
		6.5.2 For FRM-NOC 10020/100040/100050	13
	6.6	Selection of spring SAV	14
	6.7	Type plate	15
7.	Func		16
8.	_	ensions	19
9.		embly/installation	23
	9.1	General information	23
	9.2		24
		Vent Lines (Only U.S.A. and Canada)	25
10	9.4	Torques	26
		etion Saftey Shut off Valve (SAV and ASE)	27
11.		stment Adjusting the regulator	29 29
		Adjusting the SAV	31
		Example of calculations of adjustment values	32
		Regulating spring replacement	33
	11.4	11.4.1 Type UHD	33
		11.4.2 Type ND, MD and HD	35
	11.5		37
		11.5.1 Spring replacement W _{dso}	37
		11.5.2 Spring replacement W _{dsu}	39
		11.5.3 Reinstalling W _{dsu} centering spring	40
12.	Com	missioning, decomissioning and recomissioning of FRM-NOC or SAV	41
		General information	41
		Initial pressurization of FRM	41
		Leakage test	41
		Commissioning/unlocking/control of adjustment values	42
	12.5	Recommissioning	44
		Decommissioning	44
		ts and their causes	44
14.		tenance	46
		General information	46
	14.2	Regulatory maintenance instructions	50
		14.2.1 Preparation	50
		14.2.2 Replace the working membrane	50
		14.2.2.1 Type UHD	50
		14.2.2.2 Type ND, MD for 1", 1½", DN 25 and type HD	52
		14.2.2.3 Type ND, MD for 2", DN 40 y DN 50	54
		14.2.3 Replace valve seat 14.2.3.1 Type UHD	56 56
			57
		14.2.3.2 Type ND, MD for 1", 1½", DN 25 and type HD 14.2.3.3 Type ND, MD for 2", DN 40 and DN 50	57 59
		14.2.3 Type ND, ND 1012, DN 40 and DN 30	61
		14.2.4.1 Type UHD	61
		14.2.4.2 Type OTID 14.2.4.2 Type ND, MD for 1", 1½", DN 25 and type HD	63
		14.2.4.3 Type ND, MD for 2", DN 40 and DN 50	63
	14.3	Maintenance instructions SAV	65
		14.3.1 Removing the ASE (SAV mechanism only) from the housing	66
		14.3.2 Assembly of the ASE on the body	66
	14.4	Tools required	67



	14.5	SAV leakage test	69
	14.6	Recommended maintenance intervals	69
١5.	Spar	e parts	70
	15.1	Spare parts for regulator	70
	15.2	List of spare parts SAV	71
	15.3	Old spare parts for FRM-NOC and SAV produced until 08-2024	72
	15.4	Storage conditions	73
۱6.	Table	es of flow diagram	73
	16.1	Tables of flow diagram AC 10 explanation	73
	16.2	Valve flow coefficient K	74

5. Abbreviations

Abbreviation	Description
AG _o	Response pressure group of the overpressure shut-off (OPSO)
AG _u	Response pressure group of the underpressure shut-off (UPSO)
AC	Accuracy class
ASE	Safety shutoff valve (SAV) without housing (as spare part)
K _G	Flow volume coefficient for natural gas
DN	Nominal diameter
Fail-open	If the main diaphram or the auxiliary pressure required for the actuation of the main valve fails, the main valve moves automatically to the open position.
DS	Type: differential strength range
Class A	Functional class: in case the membrane is damaged or in the event of a breakdown of the impulse line pressure the SAV closes
Class B	SAV that do not close when damage to the pessure detecting element occurs
МОР	Maximum admissible operating pressure
p _d	Outlet pressure
p _{d, abs.}	Output pressure as absolute pressure
p _u	Inlet pressure
p _{u, abs.}	Inlet pressure as absolute pressure
P _{do}	Overpressure shut-off (OPSO)
P _{du}	Underpressure shut-off (UPSO)
P _{max}	Maximum operating pressure
PN	Nominal pressure rating of the flange
PS	Maximum admissible pressure
SAV	Safety shutoff valve / Slam-shut valve (same as ASE but with housing)
SBV	Safety relief valve
SG	Lock-up pressure class
SN	Serial number
SZ	Lock up pressure zone group
Тр.	Operating temperature -20 °C +60 °C
W _{ds}	Specific guide range
W _{do}	Adjustment range for the overpressure shut-off (OPSO) through regulation of the available adjusting springs
W _{du}	Adjustment range for the underpressure shut-off (UPSO) through regulation of the available adjusting springs



Abbreviation	Description
W _{dso}	Specific adjustment range of the adjusting spring installed for the over pressure shut-off (OPSO)
W _{dsu}	Specific adjustment range of the adjusting spring installed for the under pressure shut-off (UPSO)

6. Features

6.1 Technical data

Technical data	FRM-NOC					
Device	Medium pressure regulator with spring loading in accordance with EN 334					
Type of construction	DS (differential range)					
Type of gas	Family 1+2+3 (e.g. manufactured gas (town gas), commercial grade natural gas and commercial grade LPG gases in the vaporized phase).					
Nominal diameters Flange	Connecting flanges PN 25 according to EN 1092-1 or ANSI Class 150 per B16.5 DN 25 40 50 NPS 1" 1.5" 2"					
Nominal diameters Thread	Connecting thread in accordance (ISO7/1) or NPT (B1.20.1) Rp					
Permissible pressure load	10 bar (1 000 kPa / 145 PSI)					
Max. inlet pressure	10 bar (1 000 kPa / 145 PSI) See limitation per valve seat oriffice in document 288127					
Max. outlet pressure	ND: 0,66 bar (66 kPa / 9,5 PSI) MD: 1,5 bar (150 kPa / 21 PSI) HD/UHD: 6,65 bar (665 kPa / 96 PSI)					
Outlet pressure range	20 - 4 000 mbar (2 - 400 kPa) / 8 - 1 600 "W.C. (0.3 - 58 PSI)					
Minimum inlet pressure (ND)	40 mbar (4 kPa) / 16 "W.C. (0.6 PSI)					
Minimum inlet pressure (MD)	160 mbar (16 kPa) / 64 "W.C. (2.3 PSI)					
Minimum inlet pressure (HD)	550 mbar (55 kPa) / 220 "W.C. (8 PSI)					
Minimum inlet pressure (UHD)	1 250 mbar (125 kPa) / 502 "W.C. (18 PSI)					
Materials	Body of the regulator: Cast iron GJS 400-15 Actuator housing: Steel sheet (UHD)/aluminium Membranes: NBR					
Ambient temperature	-20 °C to + 60 °C / -4 °F to + 140 °F					
Relief valve	Optional. Can be activated with limited capacity					



Technical data	SAV						
Device	Safety shut-off valve according to EN 14382						
Туре	SAV 100 IS / SAV 250 DS						
Response time	≤2s						
Type of gas	Family 1+2+3						
Nominal diameters	Connection flanges PN 25 according to EN 1092-1 or ANSI class 150 lbs (B16.5)						
Flange	DN 25 40 50 NPS 1 1½ 2						
	Connection thread Rp (DIN EN 10226-1) or NPT (B1.20.1) RP / NPT 1 1½ 2						
Inlet pressure	SAV100: PS 10 bar (1 000 kPa) SAV250: PS 25 bar (2 500 kPa)*						
Lower adjustment range W _{du}	10 mbar to 3 000 mbar						
Upper adjustment range W _{do:}	60 mbar to 5 000 mbar						
Materials	Main body housing: cast iron EN-GJS 400-15 (EN-GJS 400-18 LT on request) Diaphragm housing: Aluminium (steel on request) Diaphragms: NBR						
Ambient temperature	- 20 °C to + 60 °C						

^{* 19} bar (1 900 kPa) with ANSI 150 flanges

6.2 Nomenclature

Example FRM-NOC 100025 ND /	SAV ND		100	025	ND	SAV	ND	
Туре	Medium spring-l	n pressure regulator loaded						
Maximum operating pressure MOP	100	10 000 mbar (1 000 kPa) 4 018 "W.C. (145 PSI)						
Nominal diameter	10	1"						
	15	1½"						
	20	2"						
	025	DN 25						
	040	DN 40						
	050	DN 50						
Outlet pressure ranges	ND	Low pressure						
	MD	Medium pressure						
	HD	High pressure						
	UHD	Ultra high pressure						
Safety device	SAV	Integrated safety cut-off valve						
Cracking pressure ranges	ND	Low pressure						
	MD	Medium pressure						
	HD	High pressure						
	UHD	Ultra high pressure						
Type of thread/flange	ANSI	with Standard Rp or PN-25 with flanges ANSI Class 150						
	NPT	with threads NPT						



6.3 Adjustment ranges

Туре	Connec- tion	Ver- sion	Ac- curacy class*	Closing pressure class*	Outlet pressure range W _d	Monitoring depression SAV	Monitoring overpres- sure SAV
			[AC]	[SG]		W _{du}	W _{do}
FRM-NOC 10010 ND	Rp 1	ND	10 %	20 %	20-100 mbar 8-40 "W.C.	-	-
FRM-NOC 10010 MD	Rp 1	MD	10 %	20 %	80-400 mbar 32-161 "W.C.	-	-
FRM-NOC 10010 HD	Rp 1	HD	5 %	10 %	300-1 500 mbar 120-602 "W.C.	-	-
FRM-NOC 10010 UHD	Rp 1	UHD	5 %	10 %	1 000-4 000 mbar 400-1 600 "W.C.	-	-
FRM-NOC 10010 ND / SAV ND	Rp 1	ND	10 %	20 %	20-100 mbar 8-40 "W.C.	10-90 mbar 4-36 "W.C.	60-450 mbar 24-180 "W.C
FRM-NOC 10010 MD / SAV MD	Rp 1	MD	10 %	20 %	80-400 mbar 32-161 "W.C.	10-500 mbar 4-200 "W.C.	60-999 mbar 24-401 "W.C.
FRM-NOC 10010 HD / SAV HD	Rp 1	HD	5 %	10 %	300-1 500 mbar 120-602 "W.C.	150-3 000 mbar 60-1200 "W.C.	600-5 000 mbar 241-2 005 "W.C.
FRM-NOC 10010 UHD / SAV UHD	Rp 1	UHD	5%	10 %	1 000-4 000 mbar 400-1 600 "W.C.	150-3000 mbar 60-1 200 "W.C.	600-5 000 mbar 241-2 005 "W.C.
FRM-NOC 10015 ND	Rp 1½	ND	10 %	20 %	20-100 mbar 8-40 "W.C.	-	-
FRM-NOC 10015 MD	Rp 1½	MD	10 %	20 %	80-400 mbar 32-161 "W.C.	-	-
FRM-NOC 10015 HD	Rp 1½	HD	5 %	10 %	300-1 500 mbar 120-602 "W.C.	-	-
FRM-NOC 10015 UHD	Rp 1½	UHD	5 %	10 %	1 000-4 000 mbar 400- 1 600 "W.C.	-	-
FRM-NOC 10015 ND / SAV ND	Rp 1½	ND	10 %	20 %	20-100 mbar 8-40 "W.C.	10-90 mbar 4-36 "W.C.	60-450 mbar 24-180 "W.C.
FRM-NOC 10015 MD / SAV MD	Rp 1½	MD	10 %	20 %	80-400 mbar 32-161 "W.C.	10-500 mbar 4-200 "W.C.	60-999 mbar 24-401 "W.C.
FRM-NOC 10015 HD / SAV HD	Rp 1½	HD	5 %	10 %	300-1 500 mbar 120-602 "W.C.	150-3 000 mbar 60-1200 "W.C.	600-5 000 mbar 241-2 005 "W.C.
FRM-NOC 10015 UHD / SAV UHD	Rp 1½	UHD	5 %	10 %	1 000-4 000 mbar 400-1 600 "W.C.	150-3 000 mbar 60-1 200 "W.C.	600-5 000 mbar 241-2 005 "W.C.
FRM-NOC 10020 ND	Rp 2	ND	10 %	20 %	20-100 mbar 8-40 "W.C.	-	-
FRM-NOC 10020 MD	Rp 2	MD	10 %	20 %	80-400 mbar 32-161 "W.C.	-	-
FRM-NOC 10020 HD	Rp 2	HD	5 %	10 %	300-1 500 mbar 120-602 "W.C.	-	-
FRM-NOC 10020 UHD	Rp 2	UHD	5 %	10 %	1 000-4 000 mbar 400-1 600 "W.C.	-	-
FRM-NOC 10020 ND / SAV ND	Rp 2	ND	10 %	20 %	20-100 mbar 8-40 "W.C.	10-90 mbar 4-36 "W.C.	60-450 mbar 24-180 "W.C.
FRM-NOC 10020 MD / SAV MD	Rp 2	MD	10 %	20 %	80-400 mbar 32-161 "W.C.	10-500 mbar 4-200 "W.C.	60-999 mbar 24-401 "W.C.
FRM-NOC 10020 HD / SAV HD	Rp 2	HD	5 %	10 %	300-1 500 mbar 120-602 "W.C.	150-3 000 mbar 60-1200 "W.C.	600-5 000 mbar 241-2 005 "W.C.
FRM-NOC 10020 UHD / SAV UHD	Rp 2	UHD	5 %	10 %	1 000-4 000 mbar 400-1 600 "W.C.	150-3 000 mbar 60-1 200 "W.C.	600-5 000 mbar 241-2 005 "W.C.
FRM-NOC 100025 ND	DN 25	ND	10 %	20 %	20-100 mbar 8-40 "W.C.	-	-
FRM-NOC 100025 MD	DN 25	MD	10 %	20 %	80-400 mbar 32-161 "W.C.	-	-
FRM-NOC 100025 HD	DN 25	HD	5 %	10 %	300-1 500 mbar 120-602 "W.C.	-	-
FRM-NOC 100025 UHD	DN 25	UHD	5 %	10 %	1 000-4 000 mbar 400-1 600 "W.C.	-	-



Туре	Connec- tion	Ver- sion	Ac- curacy class*	Closing pressure class*	Outlet pressure range W _d	Monitoring depression SAV	Monitoring overpres- sure SAV
			[AC]	[SG]		W _{du}	W _{do}
FRM-NOC 100025 ND / SAV ND	DN 25	ND	10 %	20 %	20-100 mbar 8-40 "W.C.	10-90 mbar 4-36 "W.C.	60-450 mbar 24-180 "W.C.
FRM-NOC 100025 MD / SAV MD	DN 25	MD	10 %	20 %	80-400 mbar 32-161 "W.C.	10-500 mbar 4-200 "W.C.	60-999 mbar 24-401 "W.C.
FRM-NOC 100025 HD / SAV HD	DN 25	HD	5 %	10 %	300-1 500 mbar 120-602 "W.C.	150-3 000 mbar 60-1200 "W.C.	600-5 000 mbar 241-2 005 "W.C.
FRM-NOC 100025 UHD / SAV UHD	DN 25	UHD	5 %	10 %	1 000-4 000 mbar 400-1 600 "W.C.	150-3 000 mbar 60-1 200 "W.C.	600-5 000 mbar 241-2 005 "W.C.
FRM-NOC 100040 ND	DN 40	ND	10 %	20 %	20-100 mbar 8-40 "W.C.	-	-
FRM-NOC 100040 MD	DN 40	MD	10 %	20 %	80-400 mbar 32-161 "W.C.	-	-
FRM-NOC 100040 HD	DN 40	HD	5 %	10 %	300-1 500 mbar 120-602 "W.C.	-	-
FRM-NOC 100040 UHD	DN 40	UHD	5 %	10 %	1 000-4 000 mbar 400-1 600 "W.C.	-	-
FRM-NOC 100040 ND / SAV ND	DN 40	ND	10 %	20 %	20-100 mbar 8-40 "W.C.	10-90 mbar 4-36 "W.C.	60-450 mbar 24-180 "W.C.
FRM-NOC 100040 MD / SAV MD	DN 40	MD	10 %	20 %	80-400 mbar 32-161 "W.C.	10-500 mbar 4-200 "W.C.	60-999 mbar 24-401 "W.C.
FRM-NOC 100040 HD / SAV HD	DN 40	HD	5 %	10 %	300-1 500 mbar 120-602 "W.C.	150-3 000 mbar 60-1200 "W.C.	600-5 000 mbar 241-2 005 "W.C.
FRM-NOC 100040 UHD / SAV UHD	DN 40	UHD	5 %	10 %	1 000-4 000 mbar 400-1 600 "W.C.	150-3 000 mbar 60-1 200 "W.C.	600-5 000 mbar 241-2 005 "W.C.
FRM-NOC 100050 ND	DN 50	ND	10 %	20 %	20-100 mbar 8-40 "W.C.	-	-
FRM-NOC 100050 MD	DN 50	MD	10 %	20 %	80-400 mbar 32-161 "W.C.	-	-
FRM-NOC 100050 HD	DN 50	HD	5 %	10 %	300-1 500 mbar 120-602 "W.C.	-	-
FRM-NOC 100050 UHD	DN 50	UHD	5 %	10 %	1 000-4 000 mbar 400-1 600 "W.C.	-	-
FRM-NOC 100050 ND / SAV ND	DN 50	ND	10 %	20 %	20-100 mbar 8-40 "W.C.	10-90 mbar 4-36 "W.C.	60-450 mbar 24-180 "W.C.
FRM-NOC 100050 MD / SAV MD	DN 50	MD	10 %	20 %	80-400 mbar 32-161 "W.C.	10-500 mbar 4-200 "W.C.	60-999 mbar 24-401 "W.C.
FRM-NOC 100050 HD / SAV HD	DN 50	HD	5 %	10 %	300-1 500 mbar 120-602 "W.C.	150-3 000 mbar 60-1200 "W.C.	600-5 000 mbar 241-2 005 "W.C.
FRM-NOC 100050 UHD / SAV UHD	DN 50	UHD	5 %	10 %	1 000-4 000 mbar 400-1 600 "W.C.	150-3 000 mbar 60-1 200 "W.C.	600-5 000 mbar 241-2 005 "W.C.

^{*}Accuracy class de / closing pressure group in accordance with EN 334 ** p_d = 80-180 mbar: AC 10, SG 20 / p_d = 180-420 mbar: AC 5, SG 10

Accuracy Group


Туре	W _{du}	AG	W _{do}	AG
ND-MD	10-70 mbar	AG 20	10-70 mbar	AG 20
	70-100 mbar	AG 10	70-999 mbar	AG 10
	100-500 mbar	AG 5	-	-
HD-UHD	150-200 mbar	AG 20	-	-
	200-250 mbar	AG 10	-	-
	250-3 000 mbar	AG 5	600-5 000 mbar	AG 5



6.4 Accuracy class / closing pressure class

AC and SG data according to EN 334 do not constitute a declaration with respect to the modulation range. For field use it is important to know the minimum and maximum flow rates. Therefore, the accuracy characteristics 'accuracy class and shut-off pressure class' were determined which can be guaranteed for a flow rate of 1:10.

The AC values of the above table refer to the maximum possible percentage deviation of the output pressure from the adjusted set-point, in which $Q_{max}/Q_{min} \leq 10$ is observed.

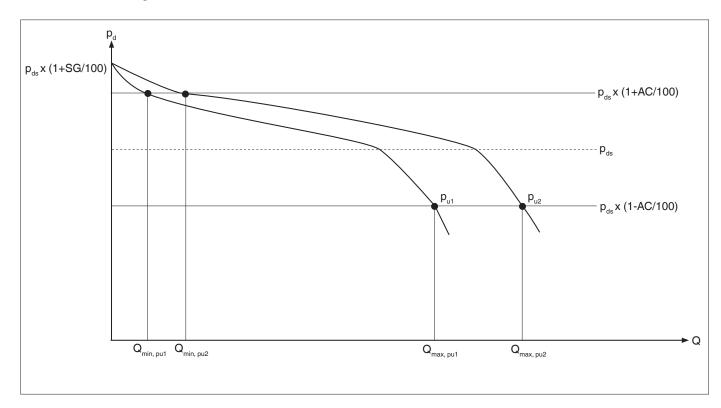

Abbrevia- tion	Description
AC	Accuracy class
P _d	Outlet pressure
p _{u½}	Inlet pressure
P _{ds}	Set nominal value of the outlet pressure
SG	Lock-up pressure class
Q _{min / pu½}	AC minimum flow volume at a specific inlet pressure p _u (lower limit of the volume flow at which the stable operating conditions for a given nominal value within the given operating temperature range).
Q _{max / pu½}	AC maximum flow volume at a specific inlet pressure p_u (upper limit of the volume flow at which a given accuracy class for a given nominal value within the given operating temperature range).



6.5 Selection of regulating spring

6.5.1 For FRM-NOC 10010 / 10015 / 100025

Outlet pre	essure adju	ustment	range V	V _{ds}				
Spring colour	Item Nº	Wire Ø	Ø [mm]	Length [mm]		Adjustmo	ent range	
		[mm]			ND	MD	HD	UHD
Red	287881	2.5	37	134	20-35 mbar 8-14 "W.C.	-	-	-
White	287882	2.8	37	134	30-50 mbar 12-20 "W.C.	-	-	-
Yellow	287883	3	37	134	50-75 mbar 20-30 "W.C.	-	-	-
Blue	274969	3.2	37	130	60-100 mbar 24-40 "W.C.	80-150 mbar 32-60 "W.C.	-	-
Black	274970	3.5	37	130	-	100-200 mbar 40-80 "W.C.	-	-
Purple	274971	3.7	37	130	-	130-250 mbar 52-100 "W.C.	-	-
Orange	274972	4	37	130	-	180-350 mbar 72-141 "W.C.	-	-
Pink	274973	4.3	37	130	-	200-400 mbar 80-161 "W.C.	-	-
White 2	287888	4.5	35	100	-	-	300-500 mbar 120-201 "W.C.	-
Yellow 2	287889	5	35	100	-	-	450-700 mbar 181-281 "W.C.	-
Blue 2	287890	5.5	35	100	-	-	550-900 mbar 221-361 "W.C.	-
Black 2	287891	6	35	100	-	-	650-1 150 mbar 261-462 "W.C.	-
Purple 2	287892	6.5	35	100	-	-	1 000-1 500 mbar 401-602 "W.C.	-
Purple 3	287893	10	70	155	-	-	-	1 000-1 600 mbar 401-642 "W.C.
Orange 2	287894	11	70	155	-	-	-	1 500-2 400 mbar 602-964 "W.C.
Pink 2	287895	12	73	155	-	-	-	2 300-3 600 mbar 923-1 445 "W.C.
Red 2	287896	13	74	160	-	-	-	3 500-4 000 mbar 1 405-1 606 "W.C



6.5.2 For FRM-NOC 10020 / 100040 / 100050

Outlet pr	essure ad	justment	range W	ds				
Spring colour	Item Nº	Wire Ø [mm]	Ø [mm]	Length [mm]		Adjustr	nent range	
					ND	MD	HD	UHD
Yellow	287884	3.5	50	220	20-25 mbar 8-10 "W.C.	-	-	-
Blue	287885	4	50	220	25-45 mbar 10-18 "W.C.	-	-	-
Black	287886	4.5	50	220	30-65 mbar 12-26 "W.C.	-	-	-
Silver	287887	5	50	220	50-100 mbar 20-40 "W.C.	-	-	-
Pink	274982	5.5	50	260	-	80-150 mbar 32-60 "W.C.		-
Green	274983	6	50	260	-	130-250 mbar 52-100 "W.C.		-
Blue 2	274985	7	50	240	-	200-350 mbar 80-141 "W.C.		-
Black 2	274986	8	50	240	-	300-400 mbar 120-161 "W.C.		-
White	287888	4.5	35	100	-	-	300-500 mbar 120-201 "W.C.	-
Yellow 2	287889	5	35	100	-	-	450-700 mbar 181-281 "W.C.	-
Blue 3	287890	5.5	35	100	-	-	550-900 mbar 221-361 "W.C.	-
Black 2	287891	6	35	100	-	-	650-1 150 mbar 261-462 "W.C.	-
Purple 2	287892	6.5	35	100	-	-	1 000-1 500 mbar 401-602 "W.C.	-
Purple 3	287893	10	70	155	-	-	-	1 000-1 600 mbar 401-642 "W.C.
Orange 2	287894	11	70	155	-	-	-	1 500-2 400 mbar 602-964 "W.C.
Pink 2	287895	12	73	155	-	-	-	2 300-3 600 mbar 923-1 445 "W.C.
Red 2	287896	13	74	160	-	-	-	3 500-4 000 mbar 1 405-1 606 "W.C.



6.6 Selection of spring SAV

Specific a	Specific adjustment range, underpressure W _{dsu}										
Spring	Order	Wire diameter	Length	Diameter	Setpoint ra	Setpoint range [mbar]					
colour	number	[mm]	[mm]	[mm]	ND-MD	HD-UHD					
Yellow	303335	1,4	58,5	13	10 - 30	-					
Blue	303336	1,6	58,2	13	25 - 90	150 - 290					
Black	303337	1,8	58,3	13	70 - 160	250 - 560					
Purple	303338	2	58,3	13	140 - 310	520 - 1100					
Orange	303339	2,25	58,3	13	290 - 500	1 050 - 1 800					
Pink	303340	2,5	58,2	13	-	1 650 - 3 000					

Specific adjustment range, overpressure W _{dso}										
Spring	Order	Wire diameter	Length	Diameter	Setpoint range [mbar]					
colour	number	[mm]	[mm]	[mm]	HD-UHD					
Silver	303321	2,4	55,2	30	60 - 140	-				
Green	303322	2,8	55	30	80 - 220	-				
Red	303323	3,2	54,6	30	160 - 450	600 - 1 700				
Yellow	303324	3,6	54,5	30	300 - 680	1 250 - 2 500				
Blue	303325	4	54,5	30	500 - 999	1 900 - 4 500				
Black	303326	4,25	54,4	30	-	3 500 - 5 000				



6.7 Type plate

Regulator



Explanations of abbreviations on the label can be found in chapter 5 "List of abbreviations".



7. Function

The pressure regulator has the task of maintaining constant outlet pressure despite fluctuations in inlet pressure and/or flow. In the depressurised state, the regulator is open. The pressure regulator meets the requirements of EN 334 as a gas pressure regulator of the differential resistance type (DS) and zero flow rate.

Main components

- A Seal
- **B** Set point spring
- C Bottom membrane enclosure
- **D** Lever system
- E Breathing connection
- F Working membrane

Depressurised state

The force of the setpoint spring ${\bf B}$ acts on the working diaphragm ${\bf F}$. In depressurised state there is no counterforce acting in the lower diaphragm shell ${\bf C}$, since no overpressure is applied in the outlet range. The resulting upward movement of the working diaphragm causes the lever system ${\bf D}$ to be pushed downwards. In this way, the control plate ${\bf A}$ is then pulled upwards and lifted from the seat. The regulator is open.


Steady State


In case of increasing outlet pressure, the force on the working diaphragm ${\bf F}$ in the diaphragm shell ${\bf C}$ increases also. The working diaphragm ${\bf F}$ is thus pushed upwards until the force of the setpoint spring ${\bf B}$ is equal to that of the outlet pressure. The upward movement of the working diaphragm ${\bf F}$ causes the lever system ${\bf D}$ to be pulled upwards. In this way, the control plate ${\bf A}$ is then pushed downwards and the valve gap is reduced. The flow volume decreased in this way reduces the outlet pressure until the set nominal value (outlet pressure) is reached again and a balance of forces at the working diaphragm ${\bf F}$ is established.

If the outlet pressure drops, the force on the working diaphragm **F** in the lower diaphragm shell **C** decreases also. The working diaphragm **F** is, thus, pushed downwards until the force of the setpoint spring **B** is equal to that of the outlet pressure. The downward movement of the working diaphragm **F** causes the lever system **D** to be pushed downwards. In this way, the control plate **A** is then pulled upwards and the valve gap is increased. The increased flow volume increases the outlet pressure until the set nominal value (outlet pressure) is reached again and a balance of forces at the working diaphragm **F** is established.


Influence of changes in inlet pressure on outlet pressure Changes in the inlet pressure have a influence on the outlet pressure, as there is no balancing device. The ratio of changes depends on the size of the working membrane (fixed size) and the size of the shell (variable).




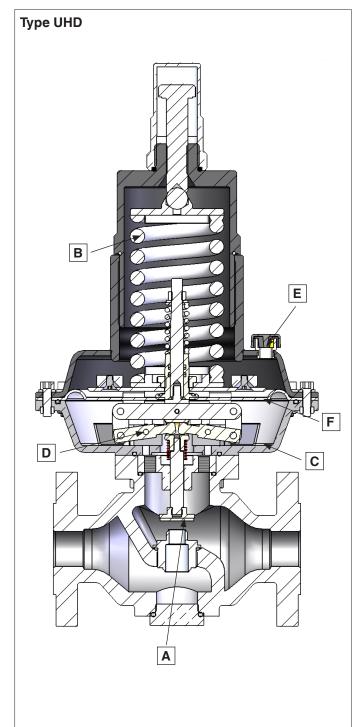

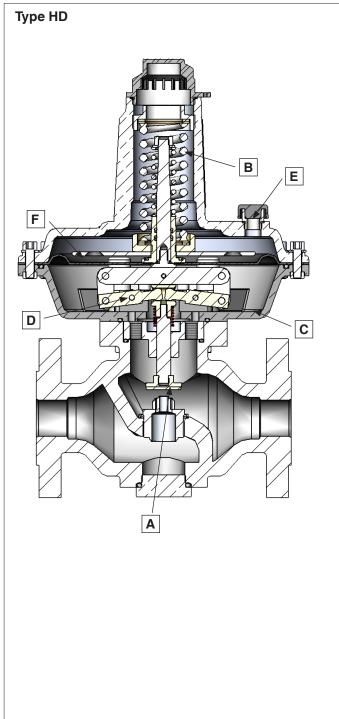



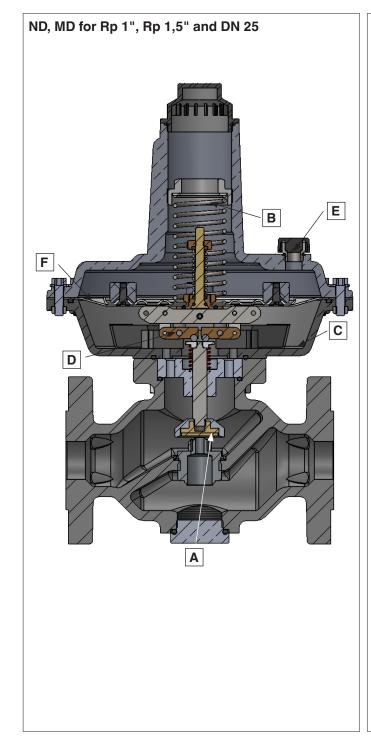


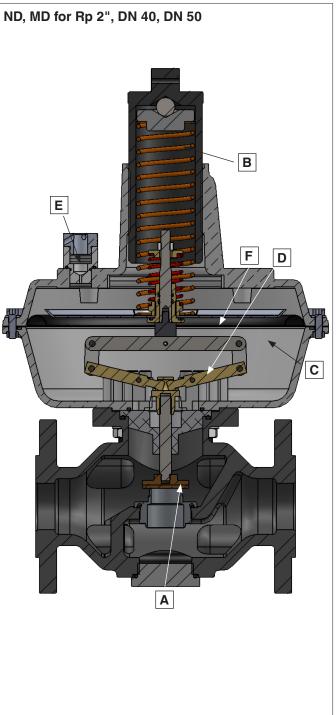



8. Dimensions

FRM-NOC...

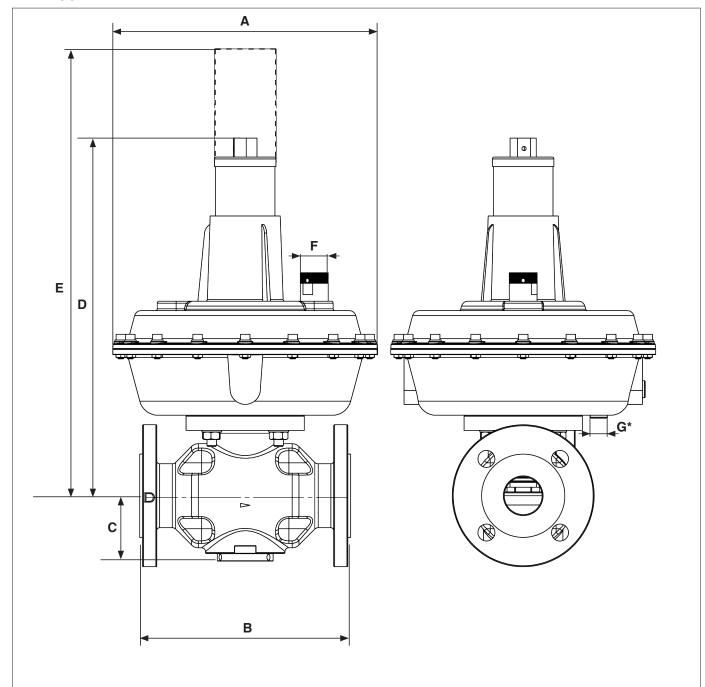




Type	Iten	n Nº	P _{max.}	DN			Weight					
Туре	Rp	NPT	[bar/kPa/PSI]	אט	Α	В	С	D	Е	F	G	[kg/lbs]
FRM-NOC 10010 ND	279054	280236	10 / 1 000 / 145	1"	210	104	-240	240	250	1⁄4 "G	1⁄4 "G	5/11.0
FRM-NOC 10010 MD	279055	280237	10 / 1 000 / 145	1"	210	104	-240	240	250	1⁄4 "G	1⁄4 "G	5/11.0
FRM-NOC 10010 HD	279058	280238	10 / 1 000 / 145	1"	210	104	-240	240	250	1⁄4 "G	1⁄4 "G	5/11.0
FRM-NOC 10010 UHD	279059	280239	10 / 1 000 / 145	1"	210	104	-342	342	667	1⁄4 "G	1⁄4 "G	9/19.8
FRM-NOC 10015 ND	279060	280240	10 / 1 000 / 145	1½"	210	132	-240	240	250	1⁄4 "G	1⁄4 "G	6/13.2
FRM-NOC 10015 MD	279061	280241	10 / 1 000 / 145	1½"	210	132	-240	240	250	1⁄4 "G	1⁄4 "G	6/13.2
FRM-NOC 10015 HD	279062	280242	10 / 1 000 / 145	1½"	210	132	-240	240	250	1⁄4 "G	1⁄4 "G	6/13.2
FRM-NOC 10015 UHD	279063	280243	10 / 1 000 / 145	1½"	210	132	-342	342	667	1⁄4 "G	1⁄4 "G	10/22.0
FRM-NOC 10020 ND	279064	280244	10 / 1 000 / 145	2"	280	156	61	345	495	½ "G	1⁄4 "G	12/26.5
FRM-NOC 10020 MD	279065	280245	10 / 1 000 / 145	2"	280	156	61	345	495	½ "G	1⁄4 "G	12/26.5
FRM-NOC 10020 HD	279066	280246	10 / 1 000 / 145	2"	210	156	61	245	255	1⁄4 "G	1⁄4 "G	11/24.3
FRM-NOC 10020 UHD	279067	280247	10 / 1 000 / 145	2"	210	156	61	345	670	½ "G	1⁄4 "G	16/35.2

Type	Iten	n Nº	P _{max.}	DN	DIMENSIONS [mm]					Weight		
Туре	DN	NPS	[bar/kPa/PSI]	DIN	Α	В	С	D	Е	F	G	[kg/lbs]
FRM-NOC 100025 ND	279085	280260	10 / 1 000 / 145	25	210	184	50	260	270	1⁄4 "G	1⁄4 "G	9/19.8
FRM-NOC 100025 MD	279086	280261	10 / 1 000 / 145	25	210	184	50	260	270	1⁄4 "G	1⁄4 "G	9/19.8
FRM-NOC 100025 HD	279087	280262	10 / 1 000 / 145	25	210	184	50	260	270	1⁄4 "G	1⁄4 "G	9/19.8
FRM-NOC 100025 UHD	279088	280263	10 / 1 000 / 145	25	210	184	50	362	687	1⁄4 "G	1⁄4 "G	13/28.7
FRM-NOC 100040 ND	279089	280264	10 / 1 000 / 145	40	280	223	70	350	500	½ "G	1⁄4 "G	17/37.5
FRM-NOC 100040 MD	279090	280265	10 / 1 000 / 145	40	280	223	70	350	500	½"G	1⁄4 "G	17/37.5
FRM-NOC 100040 HD	279091	280266	10 / 1 000 / 145	40	210	223	70	250	260	1⁄4 "G	1⁄4 "G	16/35.2
FRM-NOC 100040 UHD	279092	280267	10 / 1 000 / 145	40	210	223	70	350	675	1⁄4 "G	1⁄4 "G	21/46.3
FRM-NOC 100050 ND	279093	280268	10 / 1 000 / 145	50	280	254	80	400	550	½ "G	1⁄4 "G	20/44.1
FRM-NOC 100050 MD	279094	280269	10 / 1 000 / 145	50	280	254	80	400	550	½ "G	1⁄4 "G	20/44.1
FRM-NOC 100050 HD	279095	280270	10 / 1 000 / 145	50	210	254	80	300	310	1⁄4 "G	1⁄4 "G	19/41.9
FRM-NOC 100050 UHD	279096	280271	10 / 1 000 / 145	50	210	254	80	395	720	1⁄4 "G	1⁄4 "G	24/52.9



FRM-NOC.../SAV

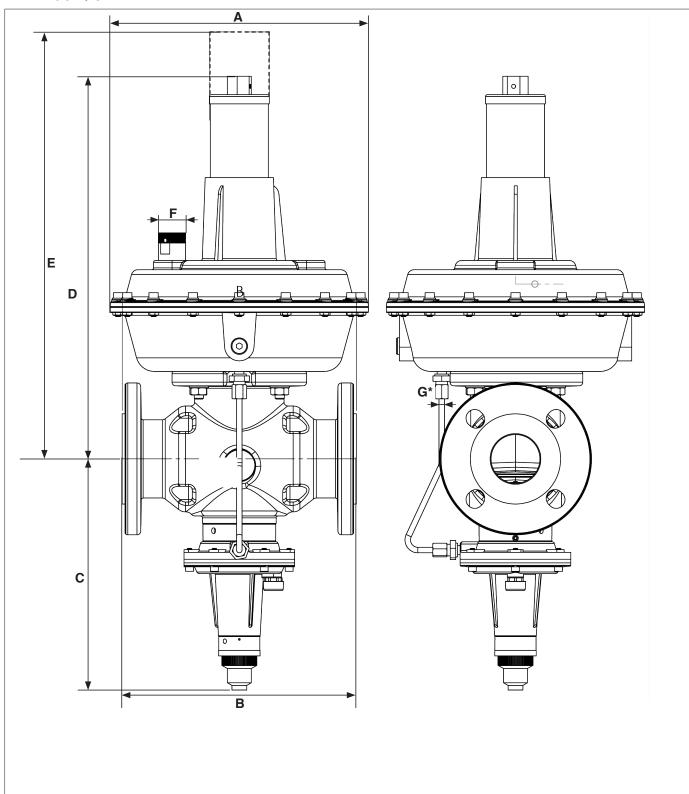



Time	Iten	n Nº	p _{max.}	DN			Dime	ension	s [mm]]		Weight
Туре	Rp	NPT	[bar/kPa]	DIN	Α	В	С	D	Е	F	G	[kg/lbs]
FRM-NOC 10010 ND /SAV ND	279042	280224	10 / 1000 / 145	1"	210	104	267	240	250	1⁄4 "G	1⁄4" G	7/15.4
FRM-NOC 10010 MD /SAV MD	279043	280225	10 / 1000 / 145	1"	210	104	267	240	250	1⁄4 "G	1⁄4" G	7/15.4
FRM-NOC 10010 HD /SAV HD	279044	280226	10 / 1000 / 145	1"	210	104	267	240	250	1⁄4 "G	1⁄4" G	7/15.4
FRM-NOC 10010 UHD /SAV UHD	279045	280227	10 / 1000 / 145	1"	210	104	267	342	667	1⁄4 "G	1⁄4" G	11/24.3
FRM-NOC 10015 ND /SAV ND	279046	280228	10 / 1000 / 145	1½"	210	132	263	240	250	1⁄4 "G	1⁄4" G	8/17.6
FRM-NOC 10015 MD /SAV MD	279047	280229	10 / 1000 / 145	1½"	210	132	263	240	250	1⁄4 "G	1⁄4" G	8/17.6
FRM-NOC 10015 HD /SAV HD	279048	280230	10 / 1000 / 145	1½"	210	132	263	240	250	1⁄4 "G	1⁄4" G	8/17.6
FRM-NOC 10015 UHD /SAV UHD	279049	280231	10 / 1000 / 145	1½"	210	132	263	342	667	1⁄4 "G	1⁄4" G	12/26.5
FRM-NOC 10020 ND /SAV ND	279050	280232	10 / 1000 / 145	2"	280	156	268	345	495	½ "G	1⁄4" G	14/30.9
FRM-NOC 10020 MD /SAV MD	279051	280233	10 / 1000 / 145	2"	280	156	268	345	495	½ "G	1⁄4" G	14/30.9
FRM-NOC 10020 HD /SAV HD	279052	280234	10 / 1000 / 145	2"	210	156	268	245	255	1⁄4 "G	1⁄4" G	13/28.7
FRM-NOC 10020 UHD /SAV UHD	279053	280235	10 / 1000 / 145	2"	210	156	268	345	670	1⁄4 "G	1⁄4" G	18/39.7

Type	Item	n Nº	P _{max.}	DN			Dime	ension	s [mm]		Weight
Туре	DN	NPS	[bar/kPa]	DN	Α	В	С	D	Е	F	G	[kg/lbs]
FRM-NOC 100025 ND /SAV ND	279073	280248	10 / 1000 / 145	25	210	184	267	260	270	1⁄4 "G	1⁄4 "G	11/24.3
FRM-NOC 100025 MD /SAV MD	279074	280249	10 / 1000 / 145	25	210	184	267	260	270	1⁄4 "G	1⁄4 "G	11/24.3
FRM-NOC 100025 HD /SAV HD	279075	280250	10 / 1000 / 145	25	210	184	267	260	270	1⁄4 "G	1⁄4 "G	11/24.3
FRM-NOC 100025 UHD /SAV UHD	279076	280251	10 / 1000 / 145	25	210	184	267	362	687	1⁄4 "G	1⁄4 "G	15/33.1
FRM-NOC 100040 ND /SAV ND	279077	280252	10 / 1000 / 145	40	280	223	273	350	500	½ "G	1⁄4 "G	19/41.9
FRM-NOC 100040 MD /SAV MD	279078	280253	10 / 1000 / 145	40	280	223	273	350	500	½"G	1⁄4 "G	19/41.9
FRM-NOC 100040 HD /SAV HD	279079	280254	10 / 1000 / 145	40	210	223	273	250	260	1⁄4 "G	1⁄4 "G	18/39.7
FRM-NOC 100040 UHD /SAV UHD	279080	280255	10 / 1000 / 145	40	210	223	273	350	675	1⁄4 "G	1⁄4 " G	23/50.7
FRM-NOC 100050 ND /SAV ND	279081	280256	10 / 1000 / 145	50	280	254	276	400	550	½ "G	1⁄4 "G	22/48.5
FRM-NOC 100050 MD /SAV MD	279082	280257	10 / 1000 / 145	50	280	254	276	400	550	½ "G	1⁄4 "G	22/48.5
FRM-NOC 100050 HD /SAV HD	279083	280258	10 / 1000 / 145	50	210	254	276	300	310	1⁄4 "G	1⁄4 "G	21/46.3
FRM-NOC 100050 UHD /SAV UHD	279084	280259	10 / 1000 / 145	50	210	254	276	395	720	1⁄4 "G	1⁄4 "G	26/57.3



9. Assembly/installation

9.1 General information



- This device can only be installed in compliance with the rules and standards applicable and in accordanc with the local regulations and authorisantions.
- Install the device in a building or housing, do not install it outdoors without suitable protective measures!
- The lifting devices used must be suitable for the load to be lifted.
- Enough installation space for operation and maintenance has to be provided.
- It is recommended to install a filter with a pore size
 ≤ 50 μm upstream of the regulator.
- The installation must not impair the functioning of other components.

Check prior to installation!

- Shut-off valves both on the inlet and outlet side are closed.
- Upstream and downstream piping are free from combustible gas.
- Prevent explosive gas-air mixture: the room atmosphere must be monitored for gas leakages. For the US and Canada, piping shall be purged per NFPA 56, NFPA 54 or per B 149.1.
- Ensure electrical continuity with use of suitable bonding straps. Prevent contact voltage and ignitable flashover.
- The performance data on the type plate corresponds to the purchase ordering data.

- Flanges on the inlet side and outlet side of the connecting lines are parallel with the FRM flanges.
- The sealing surfaces of the flange are undamaged and clean.
- The maximum inlet pressure of the system is lower than the maximum admissible pressure of the regulator.
- Protective caps at the connection flange, if any, must be removed.
- The minimum distances for the setting and changing springs must be observed.
- The pipeline on the inlet side must be free of water and dirt

Note during installation!


- Mounting must be carried out in a tension-free state.
 No excessive bending.
- Tighten the screws crosswise.
- · Tightening torques must be observed.
- Vent lines and blow-off lines have to be positioned separately.
- Vent lines and blow-off lines must lead outdoors: gases must be able to escape to a non-hazardous environment. See section "vent lines".
- The impulse lines may not be shut off or isolated from the gas pressure.
- The specified distance between the measuring points of the impulse lines must be observed.
- The flow direction (arrow) on the housing must be followed.






9.2 Installation instructions

- The installation must be carried out according to the installation scheme specified below.
- Installation of the safety shut-off valve in the flow direction (arrow/housing).
- Design a straight stabilisation section with the same diameter.
- Run pulse line clean and burr-free. Distance > 5 x DN
- Maximum flow velocity in the stabilisation section:
 ≤ 30 m/s.
- (When needed external impulse lines: steel pipe D= 12 x 1.5, only with external pulse)
- (Avoid accumulation of condensate: install the pulse lines with a gradient, only with external pulse.)

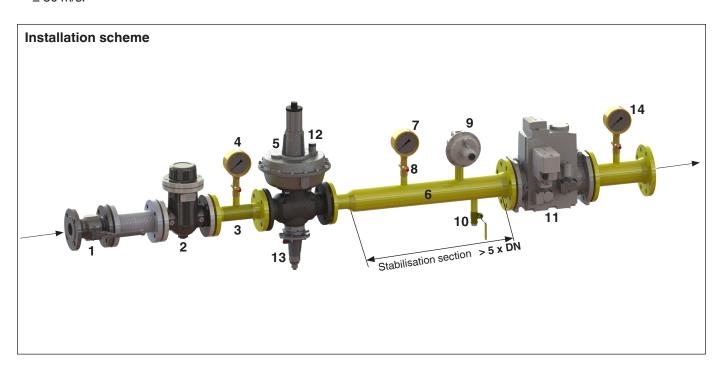

Pos.	Designation
1	Shut-off valve, inlet side (e.g. ball valve or butterfly valve)
2	Filter
3	Welded part
4	Pressure gauge, inlet side
5	Regulator with SAV integrated
6	Stabilisation section
7	Pressure gauge, outlet side
8	Pushbutton cock
9	SBV
10	Venting ball valve
11	Shut-off valve outlet side (e.g. DMV)
12	Breathing connection regulator
13	Breathing connection SAV
14	Relief connection SBV



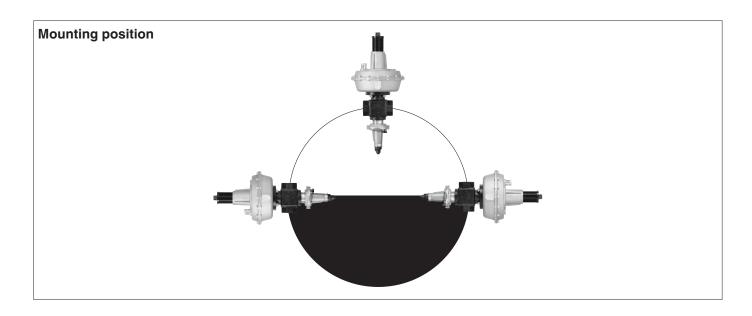

9.3 Vent Lines (Only U.S.A and Canada)

In addition to the requirements below, vent lines shall be installed in accordance with the applicable installation code (e.g. NFPA 86, NFPA 37, NFPA 54, B149.3, B1491) and shall terminate to an approved and safe location.

Requirements for Vent line Installation

- Keep elbows to an absolute minimum, and when a 90 deg needs to be made, do as follows:
 - If using rigid pipe, use long radius elbows (not short).
 Long radius elbows have a bending radius of
 1.5 times the pipe diameter. Short elbows have a bending radius of 1 times the pipe diameter.
 - If using tubing and permitted by code, use a minimum bending radius of 2 x the vent line outside diameter.
- Do not reduce along the entire run of the vent line the pipe size that is established at the regulator's threaded vent connection.
- Do not apply a bending moment on the vent line, if rigid pipe is used. This can apply a large bending force (a severe stress) to the vent connection of the regulator and damage the housing, which will bypass of the vent line.
- Apply proper pipe hangers and supports so that the vent line does not load or strain due to the regulator vent line connection due weight of the vent piping or due to a bending moment at the vent connection.

Manifolding of vent lines

- Do not manifold the FRM vent with the SAV vent or a relief valve vent.
- Do not manifold the SAV vent with a relief valve vent.
- Do not manifold other vents of similar devices (regulator to regulator, relief valve to relief valve, etc), unless permitted by and manifolded in accordance with the applicable installation code.

Requirements for Vent Line Length and Size for FRM and SAV vents

- The diameter of vent line shall be the same size at the vent connection.
- The vent line from the SAV vent connection to the point of termination shall be the same size.
- The vent line from the FRM vent connection to the point of termination shall be the same size if
 - downstream equipment is an industrial application covered by NFPA 37, NFPA 85, NFPA 86, or NFPA 87, or
 - a relief valve (or token relief valve) is mounted downstream of the FRM.

Otherwise, the following apply:

- Use schedule 40, ½ " pipe or minimum 15mm OD tubing.
- After a length of 15 ft: schedule 40, ¾ " pipe or minimum 20 mm OD tubing.
- After additional 15 ft, increase pipe to schedule 40,
 1 " pipe or minimum 26 mm OD tubing until the point of termination.

Requirements for the Vent Line's Point of Termination

- · Considerations depending on the gas type:
 - For Natural Gas and lighter than air combustible gases, the gas will eventually leave the area of discharge.
 - However, for heavier than air combustible or even non-combustible gases, they could accumulate at the point of discharge or even accumulate underneath the point of discharge which can create areas of retained combustible or non-breathable gases. Specific attention must be taken for such cases.




- If a vent line runs through a roof, verify that the vent line terminates above the point where water and snow accumulation on the roof does not cover or isolate the termination point from the atmosphere.
- To limit the consequences of rain or debris getting into the vent, always turn the outlet of the vent down towards the ground.
- Bug Screens:
 - Some bugs are attracted to the smell of the natural/ LP gas odorant and could nest in the vent line, which could seal the termination point. Install a bug screen on the termination point to deter insects from nesting in the line.
 - · Do not paint the bug screen.
- · Points of Discharge
 - The vent line must discharge away from where people might walk or work, such as pedestrians, roofers and other maintenance professionals.

- The vent line must discharge away from fresh air intakes and from windows. See applicable fuel gas installation code (e.g. CSA B149.1, NFPA 54, or International Fuel Gas Code) for acceptable clearances
- The end shall be goose-necked downwards.

9.4 Torques



Use adequate tools!
Tighten the screws crosswise!

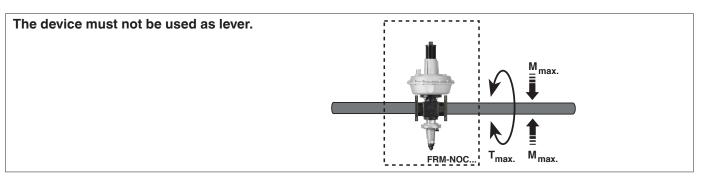

DN				25	40	50	65	80	100	125	150
Rp	3/8	1/2	3/4	1	1 ½	2	2 ½				
M _{max.} [Nm] t 10 s	70	105	225	340	610	110	1600	2400	5000	6000	7600
T _{max.} [Nm] t 10 s	35	50	85	125	200	250	325	400			



Max. torque of system accessories											
M / G	M 4	M 5	M 6	M 8	M 10	G 1/8	G 1/4	G ½	G ¾		
M _{max.} [Nm] t 10 s	2.5 Nm	5 Nm	7 Nm	15 Nm	40 Nm	5 Nm	7 Nm	10 Nm	15 Nm		



Max. torque of flanged joint				
Stud	M 12 x 55 (EN 13611)	M 16 x 65 (DIN 939)		
M _{max.} [Nm] t 10 s	30 Nm	60 Nm		



10. Function Safety Shut off Valve (SAV+ASE)

The SAV protects downstream lines against pressures that are too high or too low. As soon as the pre-set triggering pressure falls below or exceeds a limit due to a fault, the SAV interrupts automatically the gas flow. Under normal operating condition the SAV is open.

The SAV complies with the requirements of EN 14382 as safety shut-off valve.

It is classified as a Class A device when both protections for over-pressure and under-pressure monitoring are installed. In case of not having the Under-pressure protection, it is functionally a Class B device and DS strenght type. In this conditions SAV stays open even when there is no pressure detected.

Note: When using a SAV functional Class B, it implies the hazard of no detecting a rupture on the diaphragm. With a combination of a failure in the regulator (fail to open), inlet pressure will be on the downstream side too with the corresponding risk to the components downstream.

Main components

- A1 Protective cap
- A2 Intermediate protective cap for sealing settings
- **B** Adjusting screw for p_{do}
- C Adjusting screw p_{du}
- D Washer for Wdso spring
- E Setpoint spring for p_{do}
- F Setpoint spring for p
- **G** Spring dome
- H Spring centering
- Push rod
- J Working diaphragm
- K Chamber with the pressure to be monitored
- L Ball catch / trigger mechanism
- M Closing spring
- N Valve disc


Function

Chamber \mathbf{K} is connected to the outlet pressure via a pulse line.

The pressure to be checked acts on the working diaphragm **J**. The force of the setpoint springs **E** and **F** acts as counterforce.

In case of an unbalance of forces (overpressure or underpressure), the SAV is actuated and the gas supply is blocked.

If the outlet side of the gas pressure regulator and/or the fittings and devices of the succeeding gas line section, inclusive its equipment until the gas-consuming device, are not designed for the highest supply pressure (inlet pressure to the gas pressure regulator in case of an error), a SAV must be installed to shut down the gas supply before the gas pressure becomes too high:

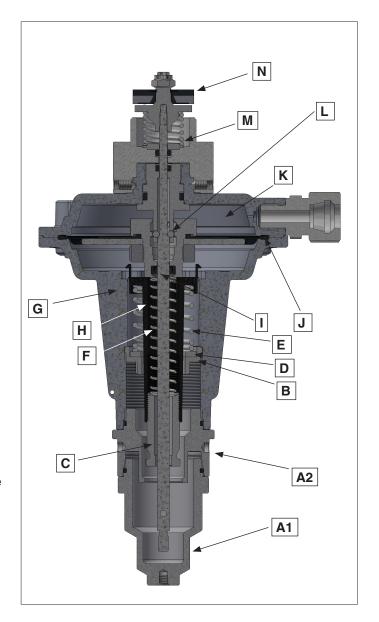



Function in case of overpressure: Outlet pressure exceeds pressure value $\mathbf{p}_{\text{\tiny do}}$

- 1. Diaphragm **J** is moved downwards against the force of the adjustment spring p_{do} **E**.
- 2. The balls of the ball lock L move outwards.
- 3. The locking mechanism of the push rod is released.
- 4. Closing spring **M** presses the valve disc **N** with the push rod onto the valve seat.
- 5. The SAV is in the closed position.

Function in case of underpressure: Outlet pressure falls below set value p_{du}

- 1. Diaphragm ${\bf J}$ is moved upwards by the force of the adjusting spring ${\bf p}_{\rm du}$ ${\bf F}$.
- The balls of the ball lock L move outwards.
- 3. The locking mechanism of the push rod is released.
- 4. Closing spring **M** presses the valve disc **N** to the valve seat via the push rod.
- 5. The SAV is in the closed position.

Unlocking the SAV (see also chapter 11.3)

- 1. The SAV can only be opened manually.
- 2. Unscrew and rotate protective cap A1.
- 3. Screw protective cap A1 onto the push rod.
- 4. Use protective cap A1 as a handle
- 5. Compensate pressure by opening the compensation valve on the valve disc: Pull protective cap **A1** downwards, approx. 2 mm.
- 6. Make sure that the correct pressure has been reached in chamber **K** for opening and pull protective cap **A1** as far as it will go and lock into place.
- 7. The SAV is open.




11. Adjustment

11.1 Adjusting the regulator

Adjusting the outlet pressure (type UHD)

The regulator is adjusted by turning the adjustment screw B.

- 1. Remove the protective cap A.
- 2. Turn the external adjusting screw **B** using the spanner size 24 mm.
- 3. Clockwise rotation: Increases the initial tension of the adjustment spring, thus increasing (+) the outlet pressure $\rm p_{\rm ds}$.
- 4. Counterclockwise rotation: Reduces the tension of the adjustment spring, reducing (-) the outlet pressure p_{ds}.
- 5. After the setting: Screw on the protective cap A again.

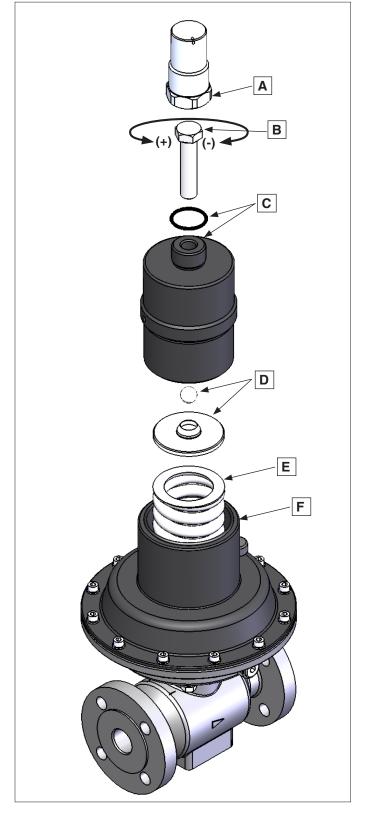




Adjusting the outlet pressure (ND, MD, HD)

The regulator is adjusted by turning the adjustment screw B.

- 1. Remove the protective cap A.
- 2. Turn the external adjusting screw **B** using the Allen key
- 3. Clockwise rotation: Increases the initial tension of the adjustment spring, thus increasing (+) the outlet pres-
- 4. Counterclockwise rotation: Discharges the adjustment spring, reducing (-) the outlet pressure p_{ds} . 5. After the setting: Screw on the protective cap **A** again.

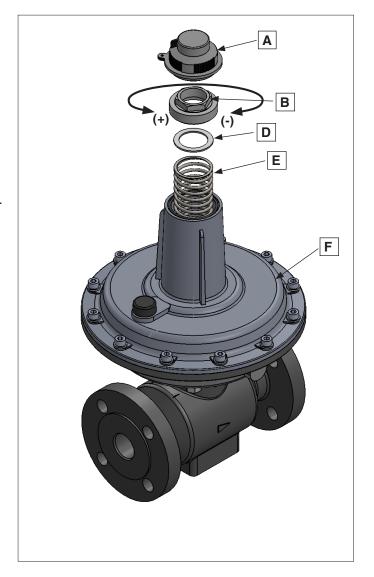




11.2 Adjusting the SAV

Trip pressure setting in case of overpressure p_{do}

- 1. Remove intermediate cap A1 + A2.
- 2. Turning the external adjusting screw **B** using a socket wrench SW 24.
- 3. Turning clockwise: increases (+) the upper trip pressure p_{α_0} .
- 4. Turning counter-clockwise: reduces (-) the upper trip pressure p_{do}.
- 5. After setting: screw on the intermediate cap **A1** and protective cap **A2**.

Trip pressure setting in case of underpressure p_{du}

- 1. Remove intermediate cap A1 + A2.
- 2. Turning the internal adjusting screw **C** using a socket wrench SW 16.
- 3. Turning clockwise: increases (+) the lower trip pressure p_{du} .
- 4. Turning counter-clockwise: reduces (-) the lower trip pressure p_{div}.
- 5. After setting: screw on the intermediate cap **A1** and protective cap **A2**.

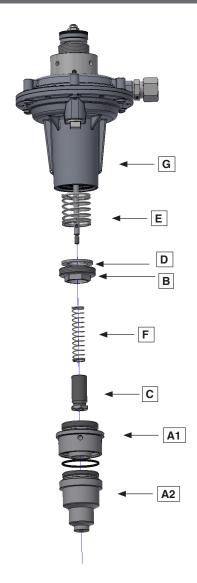

Mu	tual interference o	f pressure regula	ator and saf	ety shut	-off dev	rice must	be exclu	ded.

Calculation of recommended set values according to the regulator outlet pressure p_d

ND-MD	HD-UHD	
p _{du} < p _d - 40 mbar	p _{du} < p _d - 200 mbar	•
p _{do} > p _d + 40 mbar	p _{do} > p _d + 250 mbar	•

- The SAV must lock as soon as 1.1 times the max. system-specific operating pressure downstream is reached.
- The SAV set values must be defined taking into account the settings and tolerances of the pressure regulator.
- The tolerances and set values of additional safety devices must also be considered when setting the SAV.
- In case of a fault or regular shut-down of the downstream shut-off valve, the SAV may not respond.
 The upper shut-down pressure must be determined accordingly.



11.3 Example of calculations of adjustment values


Determination of the setting values by means of a pressure graduation table Selected regulator FRM-NOC 100025 MD / SAV MD Outlet pressure of the regulator p_d 200 mbar (80 "W.C.) System-specific operating pressure downstream of the regulator $p_{\mbox{\tiny perm}}$ 500 mbar (200 "W.C.) Limiting pressure in case of fault 550 mbar (220 "W.C.) **Accuracy class** AC 5 Response pressure group of the upper (over) shut down pressure SAV **AG**₀ 10 Response pressure group of the lower (under) shut down pressure SAV AG 10 Response group of the SBV AG 5

Result					
Device group	Device data	Pressure graduation			
	Limiting pressure in case of fault: 1.1 * p _{perm.}	550 mbar (200 "W.C.)			
	AG _o 10	440 mbar (176 "W.C.)			
	SAV	p _{do} = 400 mbar (160 "W.C.)			
Safety devices against excessive pressure	AG _o 10	360 mbar (144 "W.C.)			
	AG 5	315 mbar (126 "W.C.)			
	SBV	p _d = 300 mbar (120 "W.C.)			
	AG 5	285 mbar (114 "W.C.)			
	SG 20	240 mbar (96 "W.C.)			
Gas pressure regulator	AC 5	210 mbar (84 "W.C.)			
ado pressure regulator	FRM	p _d = 200 mbar (80 "W.C.)			
	AC 5	190 mbar (76 "W.C.)			
	AG _u 20	60 mbar (24 "W.C.)			
Safety device against insufficient pressure	SAV	p _{du} = 50 mbar (20 "W.C.)			
	AG _u 20	40 mbar (16 "W.C.)			





11.4 Regulating spring replacement

11.4.1 Type UHD

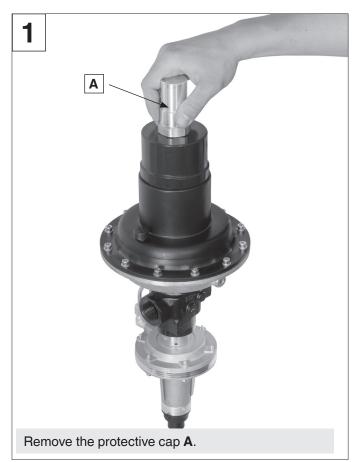




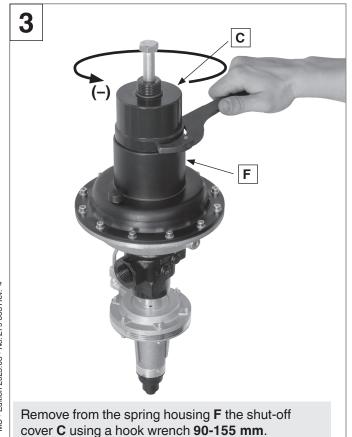

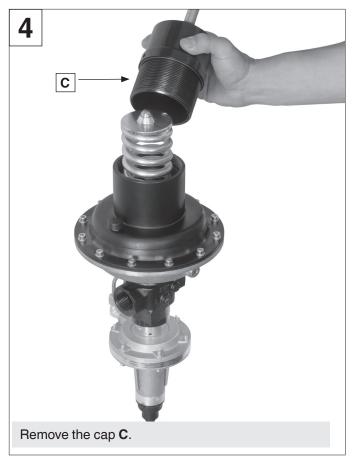





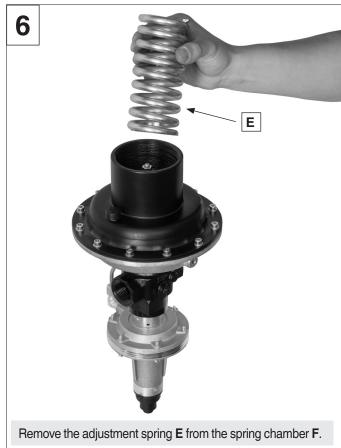


- 7. Insert a new spring with the appropriate adjustment range.
- 8. Place the disc **D** with the ball back on the spring
- Screw on the shut-off cap C again on the spring dome.
 Tighten the adjusting screw B until the desired spring pre-load is reached. Re-fit the protective cap A.




Never have your head above or near the aluminium cap when removing regulator spring. The spring tension can be high enough to rapidly eject the aluminium cap with a large force.



11.4.2. Type ND, MD and HD

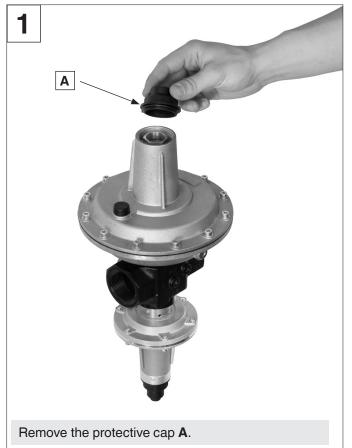




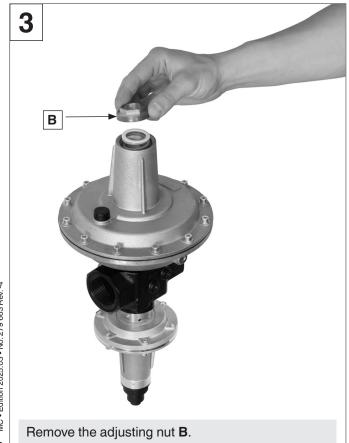






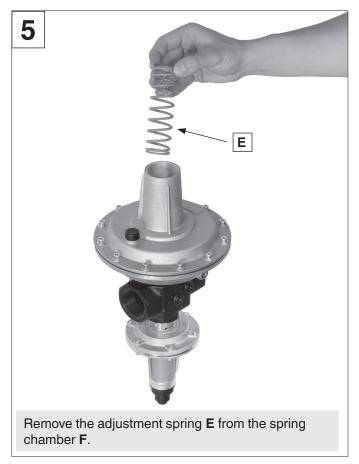


- 6. Insert a new spring with the appropriate adjustment range.
- 7. Place the washer **D** back on the spring.
- 8. Screw the adjusting nut **B** back into the spring dome until the desired initial spring tension is reached. Re-fit the protective cap **A**.





11.5 Spring replacement SAV

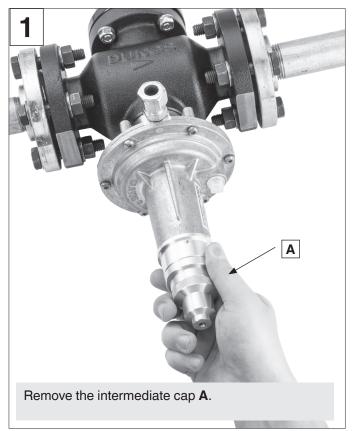

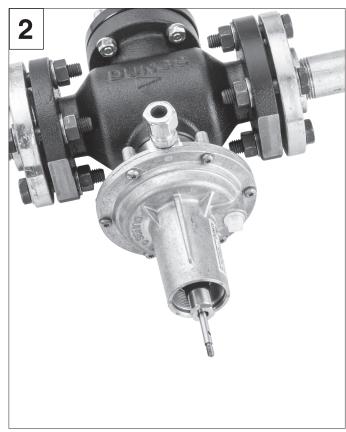



11.5.1 Spring replacement W_{ds}

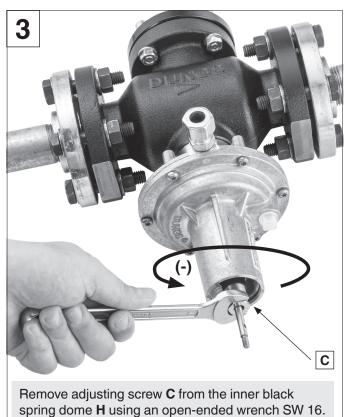

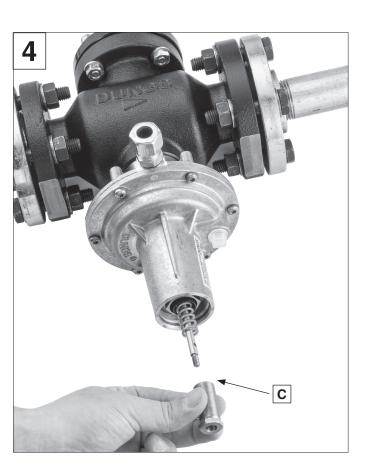



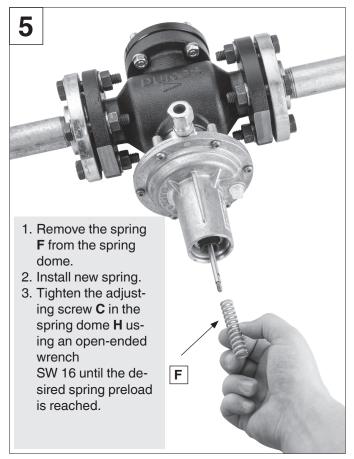


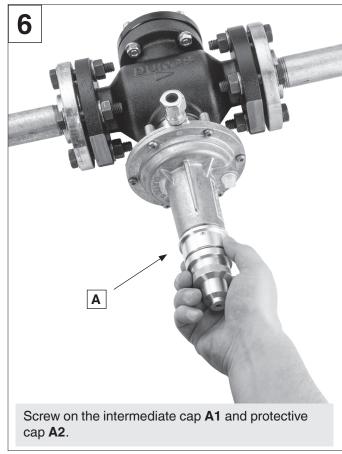







11.5.2 Spring replacement W_{dsi}

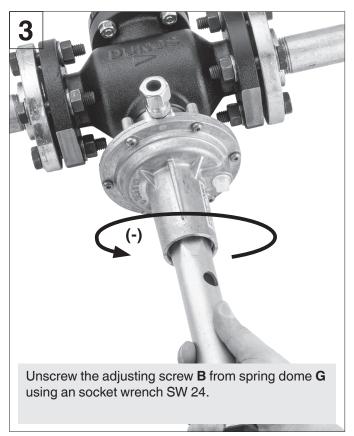

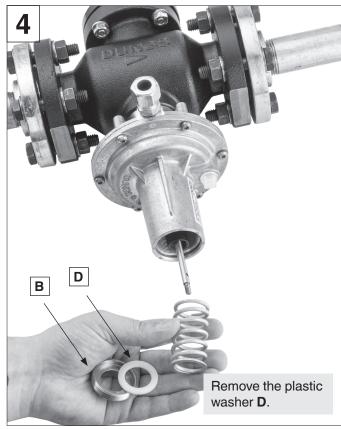

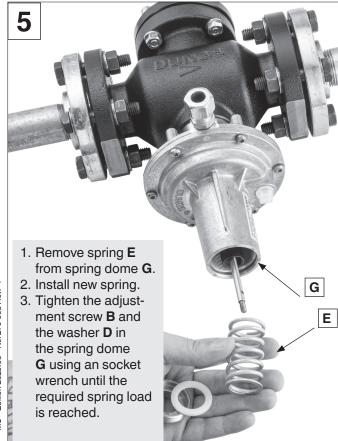



11.5.3 Reinstalling W_{dsu} centering spring

If W_{dso} spring is removed before W_{dsu} , the spring centering component might be moved outside. In that case, to install it back follow the steps.









12. Commissioning, decommissioning and recommissioning FRM-NOC or SAV

12.1 General information



Prior to commissioning and recomissioning

- The performance data on the type plate must correspond to the ordering data.
- Prevent explosive gas-air mixture: the room atmosphere must constantly be monitored using appropriate gas concentration measuring devices for the detection of gas leakages.
- Operate the device only if all safety devices are fully functional.
- Only qualified personnel is allowed to carry out the commissioning.

12.2 Initial Pressurization of FRM

- 1. When first applying pressure to the FRM or SAV, apply pressure slowly to prevent overpressure conditions or damage. This also allows all mechanisms to properly engage.
- 2. While slowly apply pressure, apply the pressure in "pulses" (open the main valve upstream 5-10% of stroke for about 1-2 seconds and then close it for 10-20 seconds) and repeat until the operating or test pressure
- is achieved. Large pressure and volumes of pipe require longer waiting times (e.g. 20 s) before applying another
- 3. It is recommended to monitor the pressure rise using a pressure gauge in the test section to prevent overpressure conditions.

12.3 Leakage test

Before commissioning the device, a test for internal and external leakages must be carried out.


- 1. Test gases for the leakage test: Use air or inert gases.
- 2. Upstream and downstream shutoff valves must be closed.
- 3. Release all pressure from the test section. Check the presence of gas and safely release to the atmosphere.
- 4. If test pressure > blow-off pressure SBV: block the line upstream of the SBV.
- 5. Connect the test section to the test device.
- 6. Test pressure: 1.1 x system-specific operating pressure Maximum PS of the device (SAV 100... 10 bar/SAV 60... 6 bar). If different pressure ratings of the system must be taken into account. If a relief valve (SBV) is installed in the test section, either the test pressure > SBV relief valve pressure setting or block the line upstream of the SBV and test at 1.1 x system-specific operating pressure maximum PS of the device.
- 7. Observe the waiting time necessary for the pressure compensation (pressure equilibrium) according to the systemspecific volumes. A minimum of one minute is required to reach pressure equilibrium.

External leakage test

- 8. Use a suitable leak detection spray on the device.
- 9. Monitor the foam formation.

Internal tightness test for SAV only


- 10. Remove the pressure in the test section downstream of the SAV and verify that SAV is closed.
- 11. Monitor the increase in pressure on the outlet side: pressure gauge accuracy 0.1 mbar. The SAV passes the test if there is no pressure increase for five minutes.
- 12. Once the leakage test has been carried out, open the shutoff valve upstream of the SBV, if installed.
- 41 ... 76 13. Release pressure in the test section, if test failed.

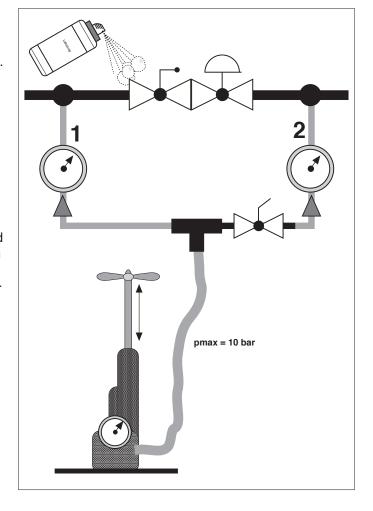





12.4 Commissioning/unlocking/control of adjustment values

- 1. Slowly open the shutoff valve on the inlet side per 12.2 "Initial applying pressure during commissioning, recommissioning or testing". The ball valve on the outlet side remains closed.
- 2. Monitor the pressure rise on the pressure gauge on the inlet side upstream of the device.
- 3. SAV resetting:

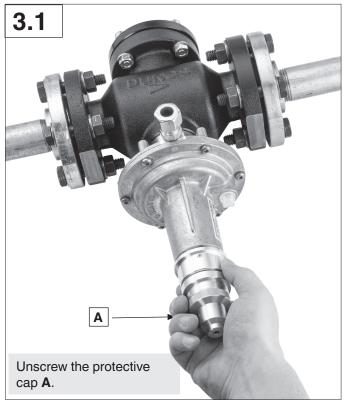

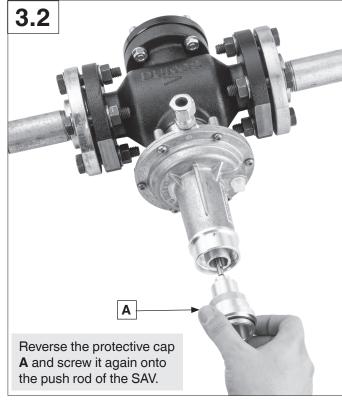

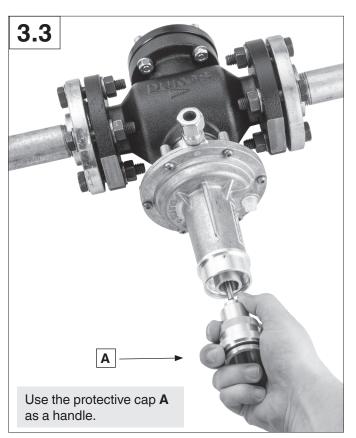

- 3.4 Compensate pressure by pulling the protective cap A downwards by approx. 2 mm. This opens the compensation valve on the valve disc.
- 3.5 Monitor the pressure rise on the outlet side of the pressure gauge.
- 3.6 Once the operating pressure (setting of the pressure regulator) on the outlet side is reached, the SAV can be reset by pulling the protective cap **A** to its mechanical stop and until it locks in place (resets).
- 3.7 SAV is now reset.
- 3.8 Unscrew the protective cap **A** from the push rod and screw it again on the spring dome **G**.

4.0 Venting the test section to atmosphere

- 4.1 If venting fuel gas to test the setting of the FRM or SAV, use a manual valve connected to a suitable hose to release the fuel gas to a safe location. Or, if a relief valve is installed, it might be possible to use it to vent some or all of the fuel gas for proper testing. Do not use a test burner for venting, and see 12.1 General information regarding risks of venting into spaces.
- 4.2 Pressurizing Test Section
- 4.3 When the test section must be completely filled with fuel gas: make sure that the test section is free from air by using a test burner. Close the stop-cock on the venting hose.



5.0 Initial Checking of the FRM outlet pressure

- 5.1 Before initially starting of the equipment, an initial check of the FRM outlet pressure setting shall be
- 5.2 To check the outlet pressure setting of the regulator:
- 5.3 Partially open a manual valve connected to the hose in 4.0 above just enough to generate gas flow, and check the set value (outlet pressure) using a pressure gauge. If necessary, correctly adjust the setting according to section 11.1 Regulator Setting.
- 5.4 Close the manual valve, remove the hose, insert the sealing cap **A**.


6.0 Checking upper(over) response pressure p_{do}


- 6.1 SBV installation on the outlet side: block the line upstream of the SBV.
- 6.2 Create bypass around the FRM (see below).
- 6.3 Connect a line between the inlet and outlet side of FRM using manually operated test/purge valves.
- 6.4 With both valves closed, slowly open the upstream valve to charge the bypass line.
- 6.5 Slowly open the downstream valve in the bypass line and monitor the increase of pressure on the outlet side using a pressure gauge.
- 6.6 Avoid inadmissible high pressure on the outlet side. Stop applying pressure immediately after the SAV has tripped.

- 6.7 Once the SAV trips, read the upper (over) response pressure on the pressure gauge on the outlet side.
- 6.8 If necessary, correct the SAV set points according to the specifications in section 11.2 "SAV setting" and check it again.

7.0 Check of the lower (under) response pressure p_{du} setting.

- 7.1 Release the pressure in the test section on the outlet side until the operating pressure is reached.
- 7.2 Check if gas is available and release it safely in the atmosphere.
- 7.3 Monitor pressure drop on the pressure gauge.
- 7.4 Unlock / reset SAV, if SAV is tripped. See "3. SAV resetting" in section 12.4.
- 7.5 Check that all test/purge valves are closed.
- 7.6 Create a means to safely release the fuel gas in downstream the SAV into the atmosphere. See figures below and reference "4.0 Venting the test section to atmosphere" in section 12.3.
- 7.7 Slowly vent the fuel gas per "4.0 Venting the test section to atmosphere". After the SAV trips, read the lower (under) response pressure on the pressure gauge.
- 7.8 Close the vent valve, remove the hose, insert the sealing cap.
- 7.9 Slowly open the shut-off valve on the inlet side.

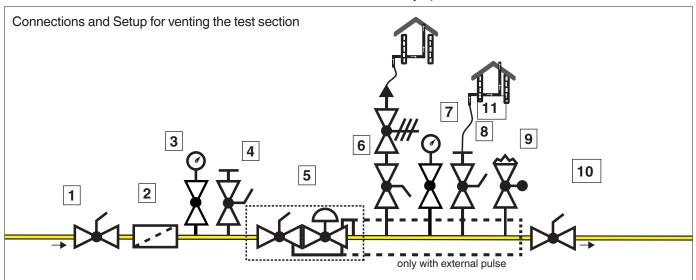

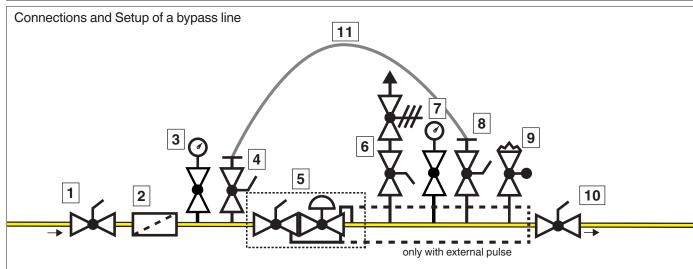



Pos.	Designation
1	Shut-off valve, inlet side
2	Filter
3	Pressure gauge with pushbutton cock
4	Venting ball valve
5	Regulator with SAV integrated
6	SBV with shut-off valve

Pos.	Designation
7	Pressure gauge with pushbutton cock
8	Venting ball valve
9	Test burner
10	Shut-off valve, outlet side
11	Hose

12.5 Recommissioning

- 1. Close the shutoff valve upstream of the bypass line.
- 2. Remove the hose.
- 3. Open the ball valve upstream of SBV, if installed.
- 4. Reset SAV, see section 12.4.
- 5. Once SAV has been reset, open the shutoff valve on the outlet side of the SAV.

12.6 Decommissioning

- 1. Slowly close the shut-off valve on the outlet side.
- 2. Slowly close the shut-off valve on the inlet side.
- 3. Release gas in the test section in a controlled and safe manner into the atmosphere.

13. Faults and their causes



- · Repair work on the device must only be performed by authorised and skilled personnel.
- Use only original spare parts.

Fault in the SAV	Possible causes	Troubleshooting
	The pulse line is not connected.*	Install the pulse line.
	The pulse line is clogged.*	Clean the pulse line.
	The pulse line has leaks.*	Seal the pulse line.
The SAV cannot be	The pulse line is damaged.*	Replace the pulse line.
opened/unlocked	The pulse pressure is outside the adjustment range.	Adjust the locking pressure of the SAV or the outlet pressure.
	The adjusting springs are not suitable for the application.	Replace the adjusting spring.
	The adjustment range of the SAV is outside the outlet pressure.	Replace the SAV or the ASE.
	The pulse line is not connected.*	Connect/install the pulse line.
	The pulse line is clogged.*	Clean the pulse line.
The SAV does not switch	The pulse line has leaks.*	Seal the pulse line-
or does not respond.	The pulse line is damaged.*	Replace the pulse line.
	The pulse pressure is outside the adjustment range.	Adjust the locking pressure of the SAV.
	The adjustment springs are not suitable for the application.	Replace the adjusting spring.
	The valve head is damaged or worn.	Replace the ASE or have it repaired by DUNGS.
	The seat of the valve is damaged.	Replace the valve seat.
The SAV switches, but does not seal.	The movable parts are contaminated with foreign particles.	Clean the movable parts or replace the ASE.
	The drive is damaged.	Replace the ASE.
	The O-Ring is damaged.	Replace the O-Ring or the ASE.
The SAV is leaking towards	The working diaphragm is damaged.	Change the working diaphragm or replace the ASE.
the atmosphere.	The sealing ring between ASE and housing of the SAV is damaged.	Replace the ring or the ASE.
	The O-Ring junta on the ASE is damaged.	Replace the O-Ring or the ASE.



Fault in the regulator	Possible causes	Troubleshooting
There is no gas	The regulator is not receiving gas.	Check the gas installation prior to the regulator.
Ů	The SAV is closed.	Unlock the SAV.
	The regulator contains a spring with the wrong set point.	Replace the set point spring.
The regulator provides a wrong outlet pressure.	The desired output pressure is outside the possible output pressure range.	Replace the regulator model.
	Inlet pressure is too low.	Check the gas system or resize the regulator.
	The pulse line is not connected.*	Install the pulse line.
	The pulse line is closed.*	Check the pulse line
	The pulse line has leaks.*	Seal the pulse line.
With no flow volume the	The seal is damaged.	Replace the seal.
outlet pressure corresponds to the inlet pressure.	The seat of the seal is damaged.	Replace the seat of the seal.
to the linet pressure.	The working diaphragm is damaged.	Replace the working membrane.
	The lever system is damaged.	Replace the lever system.
	The O-Rings juntas on the regulator are damaged.	Replace the O-Rings of the regulator.
	The O-Rings of the SAV are damaged.	Replace the O-Rings of the SAV.
	The pulse line is not connected.*	Install the pulse line.
During operation the outlet	The pulse line is closed.*	Check the pulse line
pressure corresponds to the	The pulse line has leaks.*	Seal the pulse line.
inlet pressure.	The working diaphragm is damaged.	Replace the working membrane.
	The lever system is damaged.	Replace the lever system.
	The desired flow rate exceeds the capacity of the regulator.	Re-size the regulator and replace it.
	Incorrect dimensioning of the gas pipe.	Increase the nominal diameter of the line.
As the flow rate increases,	The gas filter before the regulator is dirty.	Clean the gas filter, replace the filter screen.
the outlet pressure drops.	The lever system is damaged.	Replace the lever system.
	The pulse line is closed.	Check the pulse line
	The SAV is damaged.	Check the SAV.
Gas escapes at the vent	The working diaphragm is damaged.	Replace the working membrane.
connection.	The O-Rings on the compensation shaft are damaged.	Replace the lever system.
	Required flow is lower than minimum operating flow.	Transitory situation at start-up. Nozzle change for daming factor may help. Nozzle kit 270712.
Outlet pressure is oscillating in operation.	Regulator is oversized.	Replace regulator with the right one.
•	Ressonance effect with a regulator downstream.	Change nozzle configuration (kit 270712). Change outlet pressure setting.

 $[\]ensuremath{^*}$ in the case of regulator with external line



14. Maintenance

14.1 General information



- The Pressure Equipment Directive (PED) requires the devices to be checked at regular intervals to ensure the following in the long term: Safety and functioning of the device, high long-term utilisation ratios, resulting in minimum environmental impact.
- The maintenance of the device can only be carried out in compliance with the applicable rules and standards and in accordance with current local regulations.
- Repair work on the device must only be performed by authorised and skilled personnel.
- · Adhere to the maintenance intervals indicated.
- The risks in case of an escape of flammable or noxious gases into the atmosphere have to be assessed.
- Always install new seals after replacement or modification of parts.
- Use only original spare parts.
- Do not use alcohol-based or solvent-containing cleaning solutions for cleaning the device.
- Greases, adhesives, sealing material must be approved.


Prior to maintenance


- Shut-off valves both on the inlet and outlet side are closed
- · Line is depressurised and free from combustible gas.
- Prevent explosive gas-air mixture: the room atmosphere must constantly be monitored using appropriate gas concentration measuring devices for the detection of gas leakages.
- SAV is in the closed position.
- Original spare parts are available.

Pos.	Designation
Α	Protective cap
В	Adjusting screw + washers
С	Sealing plug
D	Spring disc with ball
E	Adjusting spring
F	Membrane cover
G	Hexagonal screws + nuts + washers
Н	O-Ring
I	Lever system
J	Safety nut
K	Spring disc
L	Safety spring
M	Working diaphragm
N	Guide bar
0	Bottom membrane enclosure
Р	Lower diaphragm disc
Q	Sealing ring
R	Washers
S	Seal
Т	Mounting screws
U	Mounting plates
V	Seat of the seal
W	O-Ring
Х	Body of the regulator
Υ	Hexagon screws + nuts + washers
Z1	Upper washer
Z2	Lower washer




Type UHD

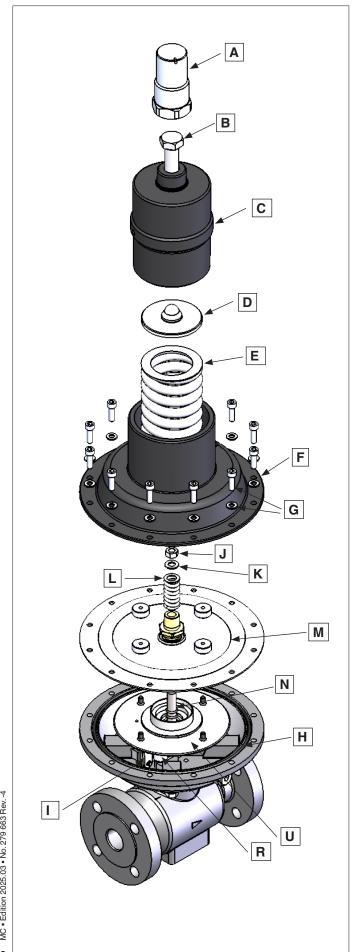


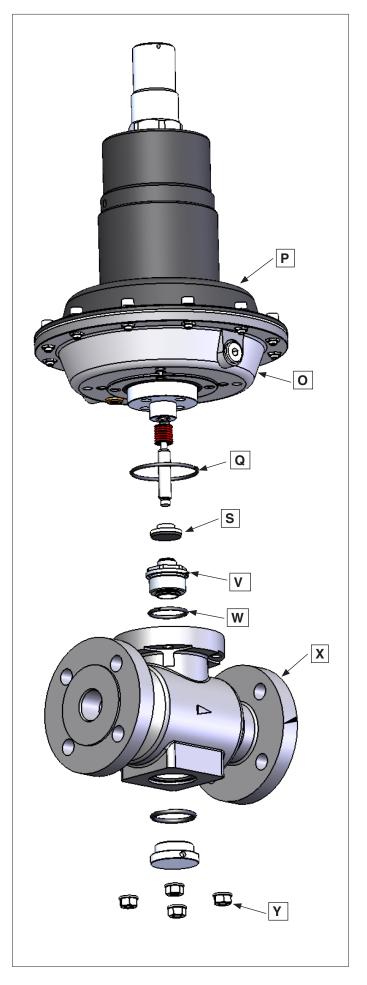




Type ND, MD for 1", $1\frac{1}{2}$ " and DN 25 and type HD

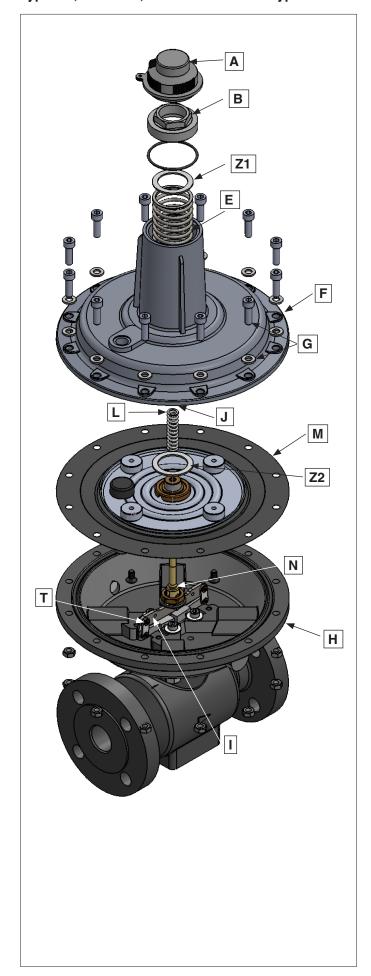


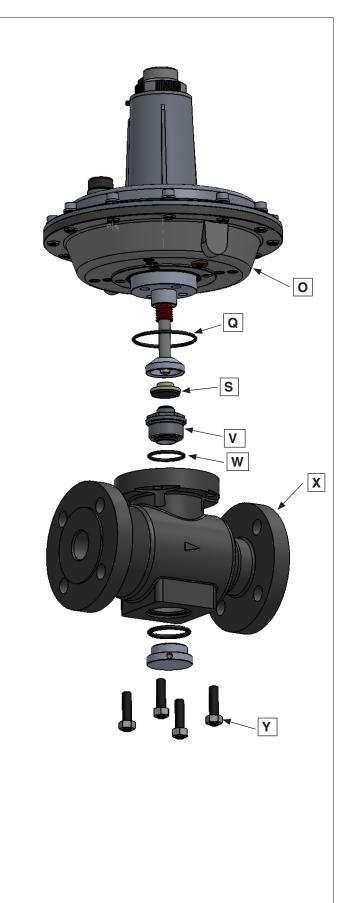



Type ND, MD for 2", DN 40, DN 50

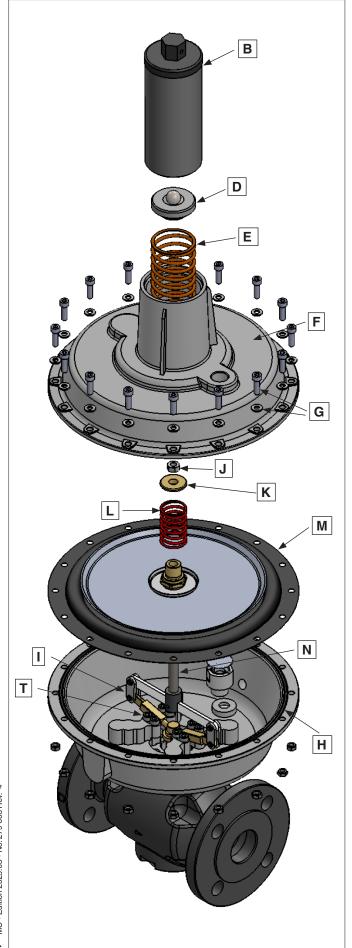

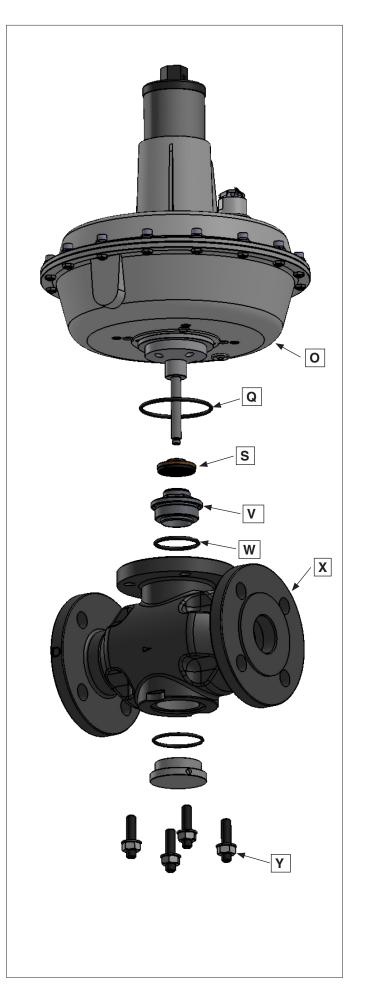

MC • Edition 2025.03 • No. 279 663 Rev. -4



14.2 Regulatory maintenance instructions

14.2.1 Preparation

Follow the steps shown in section 11.4 to extract the regulating spring.

14.2.2 Replace working membrane

14.2.2.1 Type UHC







MC • Edition 2025.03 • No. 279 663 Rev. -4





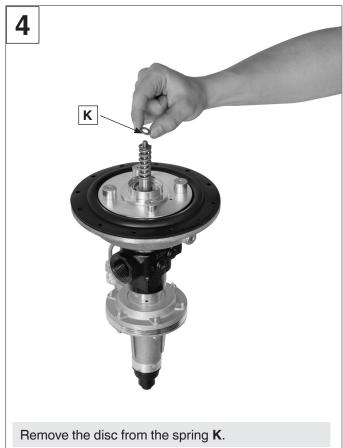





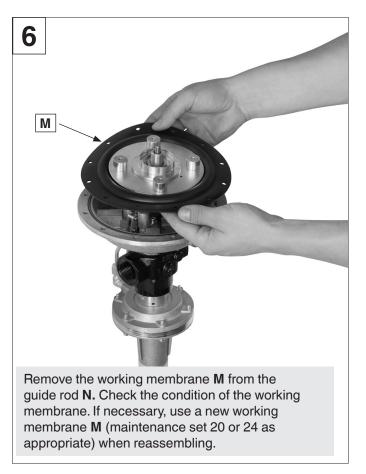


DUNGS®

14.2.2.2 Type ND, MD for 1", 1½", DN25 and type HD

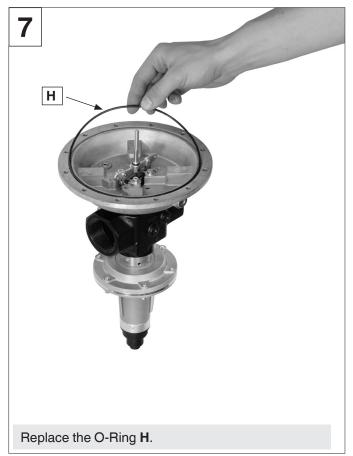

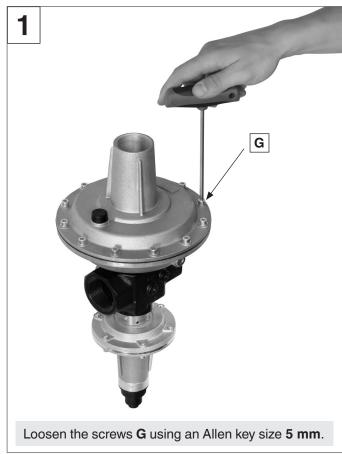

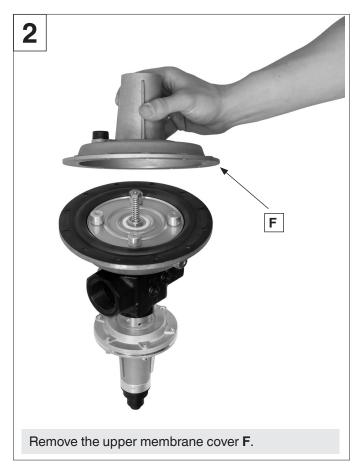













Remove the working membrane **M** from the guide rod **N**. Check the condition of the working membrane. If necessary, use a new working membrane **M** (maintenance set 17, 18, 19 or 23 as appropriate) when reassembling.






14.2.2.3 Type ND, MD for 2", DN 40 and DN 50

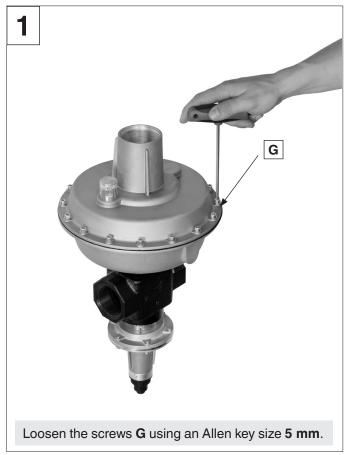

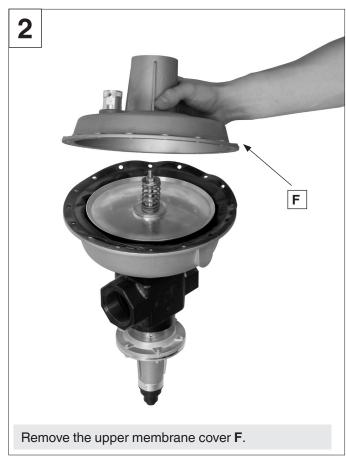

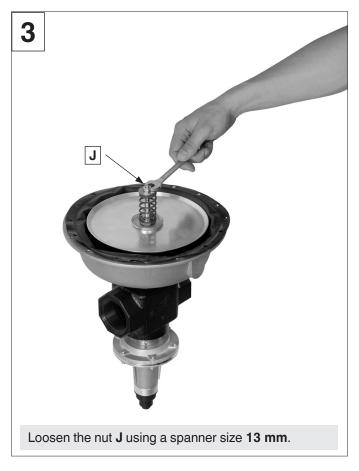










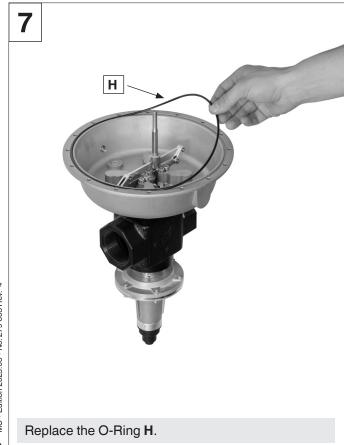




14.2.3 Replace valve seat

14.2.3.1 Type UHD





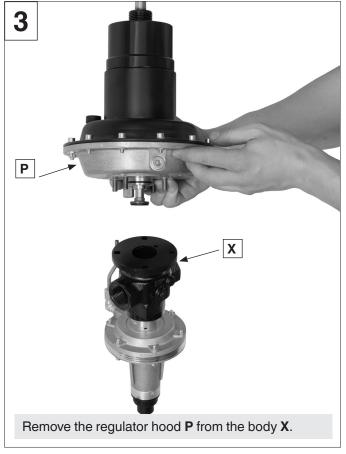











14.2.3.2 Type ND. MD for 1". 11/2". DN25 and type HD







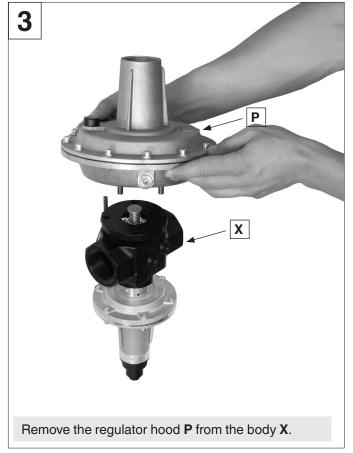


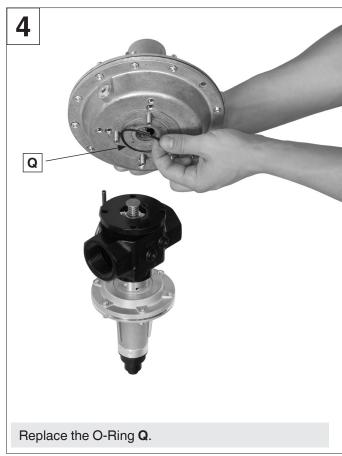








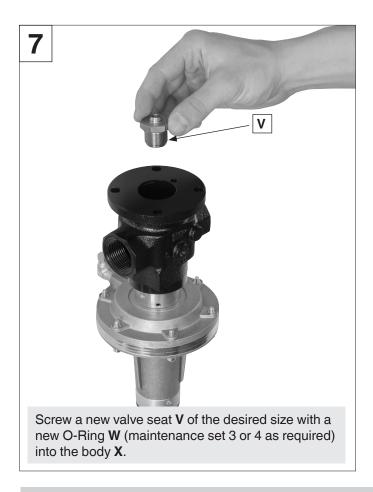







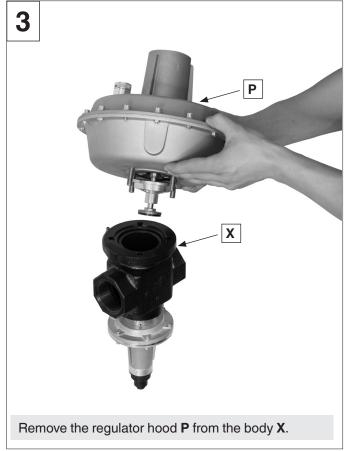











14.2.4 Replace seal

14.2.4.1 Type UHD




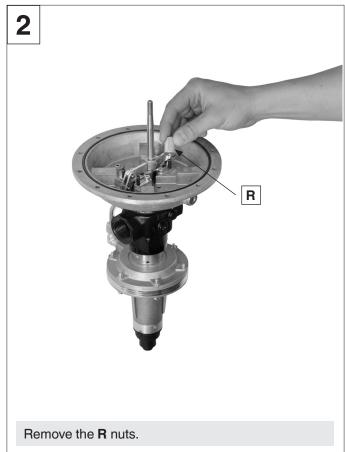

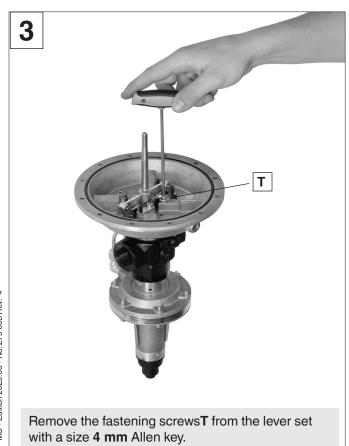





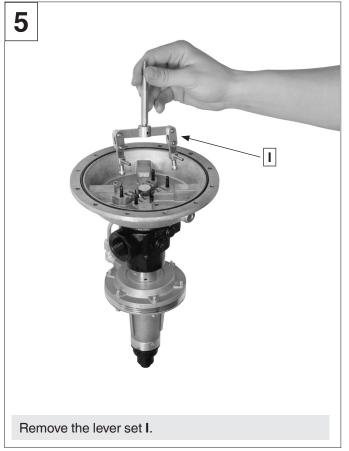









14.2.4.2 Type ND, MD for 1", 1 $^{1}\!\!/_{2}$ ", DN 25 and type HD

See section 14.2.3.2, steps 1 to 5 and replace with maintenance kit 7, 8, 10, 12, 13 as appropriate).

14.2.4.3 Type ND, MD for 2", DN 40 and DN 50






MC • Edition 2025.03 • No. 279 663 Rev. -4

63 ... 76







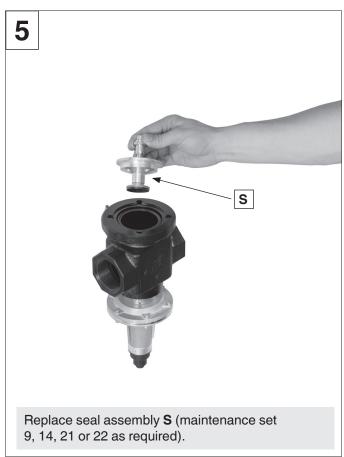



14.3 Maintenance instructions SAV




- The Pressure Equipment Directive (PED) requires the regulator to be checked at regular intervals to ensure: safety and correct functioning of the device, high longterm utilisation ratios, resulting in minimum environmental impact.
- The maintenance of the device can only be carried out in compliance with the applicable rules and standards and in accordance with current local regulations.
- Maintenance work on the device must only be performed by authorised and skilled personnel.
- Adhere to the maintenance intervals indicated.
- The risks in case of an escape of flammable or noxious gases into the atmosphere have to be assessed.
- Always install new seals after replacement or modification of parts.
- Use only original spare parts.
- Do not use alcohol-based or solvent-containing cleaning solutions for cleaning the device.

Prior to maintenance


- Shut-off valves both on the inlet and outlet side are closed.
- · Line is depressurised and free from combustible gas.
- Prevent explosive gas-air mixture: the room atmosphere must constantly be monitored through gas concentration measuring devices for the detection of gas leakages.
- · SAV is in the closed position.
- · Original spare parts are available.

Pos.	Designation
0	Allen screws, 4 units
Р	SAV cover
Q	O-ring
R	Valve seat
S	Sealing ring for valve seat
Т	SAV housing
U	O-ring
٧	ASE connecting piece / housing
W	Hexagonal socket grub screws, 4 units
Χ	ASE

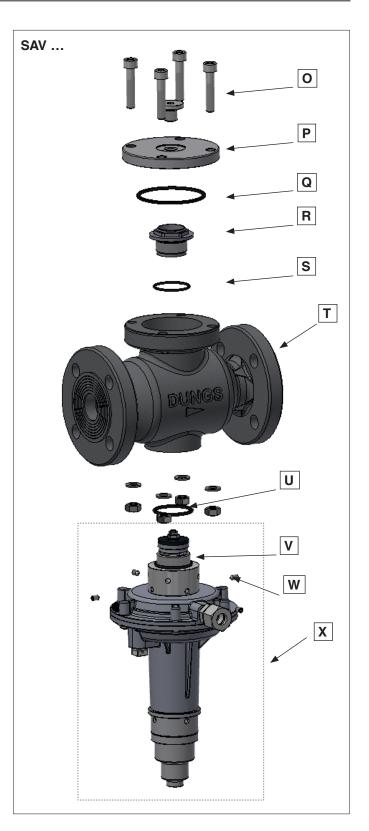



14.3.1 Removing the ASE (SAV mechanism only) from the housing

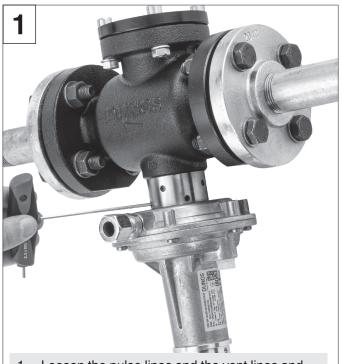

- 1. Loosen the pulse lines and the vent lines and remove them.
- 2. Loosen four hexagonal socket grub screws (M 5x8) using an internal hex key SW 2.5.



wrench. For required tool see chapter 13.3.





14.3.2 Assembly of the ASE on the body

1	Place the new O-ring U in the turned groove on the housing T intended for this purpose.
2	Screw the thread of the connecting piece $f V$ into the housing $f T$ using a hook wrench.
3	Fix the connecting piece V of the ASE X using 4 hexagonal socket grub screws W (M5x8).

14.4 Tools required













SAV

Work step		Tool designation	Pressure	Wrench size (mm)		
VVC	ork step	Tool designation	rating	DN 25	DN 40	DN 50
1	Loosen the pulse line.	Open-ended wrench (A)	ND/MD/HD	24	24	24
	Delegas the adjusting envises	Socket wrench (B)	ND/MD/HD	17	17	17
2	Release the adjusting springs.	Socket wrench (B)		22	22	22
	Separate the ASE from the	Internal hex key (C1)	ND/MD/HD	2.5	2.5	2.5
3	body	Jointed hook wrench with pins according to DIN 1810 (D)		35-60	60-90	60-90
		DIN 1810 (D)		33-00	00-90	00-90
4	Replace the working membrane in the ASE.	Internal hex key (C2)	ND/MD/HD	4	4	4

Regulator

Work step		Tool designation	Pressure	Wrench size (mm)		
		Tool designation	rating	DN 25	DN 40	DN 50
1	Loosen the pulse line.	Open-ended wrench (A)	ND/MD/HD	24	24	24
		Open-ended wrench (A)	ND/MD/JD	24	24	24
2 Re	Release the adjusting springs.	Jointed hook wrench with pins (D) (UHD)	ND/MD/HD	90-155	90-155	90-155
3	Deplete the weeking membrane	Internal hex key (C1)	ND/MD/HD	5	5	5
3	Replace the working membrane.	Open-ended wrench (A)	ND/MD/HD	13	13	13
4	Replace the seal.	Open-ended wrench (A)	ND/MD/HD	13	17	17
5	Replace the valve seat.	Socket wrench (B)	ND/MD/HD	27	46	46



14.5 SAV Leakage test

Go to section "12. Commissioning, decomissioning and recommissioning for FRM-NOC or SAV" for performing functional and leakage testing of SAV.

14.6 Recommended maintenance intervals

- 1. The maintenance intervals depend on the systemspecific operating and environmental conditions, gas quality, state of the pipelines, etc.
- 2. The maintenance intervals have to be set by the system operator according to the system requirements.
- It is recommended to perform a functional test on a monthly base and carry out maintenance works every year including a leakage testing, in order to guarantee the system availability.
- 4. It is necessary to comply at least with the maintenance intervals specified in G 495.

Max. inlet pressure [bar]	Functional test	Maintenance
> 0.1 to 1	every 4 years	every 8 years
> 1 to 5	every 2 years	every 4 years
> 5	once a year	every 2 years



15. Spare parts

15.1 Spare parts for regulator

Set	Spare part	Version	Item Nº	Spare part/ illustration
1	Top cover alumini cap	FRM-NOC10010/12/025 ND/MD FRM-NOC10010/15/20/025/040/050 HD	287754	
2	Top cover UHD	FRM-NOC100XXX UHD	270396	
3		FRM-NOC10010/15 XX	303401	9 9
4	KIT valve seat orifices Replacements are valid for	FRM-NOC100025 XX	303402	
5	devices with a serial number ≥ than 10000 (see the type plate, e.g. 1PDK270290 S00010000)	FRM-NOC10020/040XX	303403	
6		FRM-NOC100050 XX	303404	999) 999
	Seal + o-ring (body and cover)	FRM-NOC10010/15 ND/MD	287759	甩
		FRM-NOC10010/15 HD/UHD	287760	甩
		FRM-NOC10020/040 ND/MD	287761	
		FRM-NOC10020/040 HD	287762	
7		FRM-NOC10020/040 UHD	287763	
,		FRM-NOC100025 ND/MD	287764	
		FRM-NOC100025 HD/UHD	287765	A
		FRM-NOC100050 ND/MD	287766	
		FRM-NOC100050 HD	287767	
		FRM-NOC100050 UHD	287768	



Set	Spare part	Version	ltem №	Spare part/ illustration
8	MEMBRANE(1000411) 10/15/25 ND + MEMBRANE JOINT	FRM-NOC10010/15/025 ND	287769	
9	MEMBRANE(1000412) 10/15/25 MD + MEMBRANE JOINT	FRM-NOC10010/15/025 MD	287770	
10	MEMBRANE(1000413) 10/15/25 HD + MEMBRANE	FRM-NOC10010/15/025 HD	287771	
11	MEMBRANE(1000414) 10/15/25 UHD + MEMBRANE JOINT	FRM-NOC10010/15/025 UHD	287772	
12	MEMBRANE(1000421) 20/40/50 ND + MEMBRANE JOINT	FRM-NOC10020/040/050 ND	287773	
13	MEMBRANE(1000422) 20/40/50 MD + MEMBRANE JOINT	FRM-NOC10020/040/050 MD	287774	
14	MEMBRANE(1000413) 20/40/50 HD + MEMBRANE + SPACER JOINT	FRM-NOC10020/040/050HD	287775	
15	MEMBRANE(1000424) 20/40/50 UHD + MEMBRANE JOINT + SPACER JOINT	FRM-NOC10020/040/050UHD	287776	

15. 2 List of spare parts SAV

Set	Spare part	Version	Order number	Image
1	Protective cap	SAV 100025-100050 ND-MD SAV 250025-250050 HD-UHD SAV 10010-10020 ND-MD/HD-UHD	on request	A1 + A2
	Valve	SAV 100025 ND-MD SAV 250025 HD-UHD	303318	
2*	seat with sealing ring and O-ring	SAV 100040 ND-MD SAV 250040 HD-UHD	303319	(Q)
		SAV 100050 ND-MD SAV 250050 HD-UHD	303320	R+S
	ASE with O-ring	SAV 100025 ND-MD SAV 10010 ND-MD SAV 10015 ND-MD	303391	X
		SAV 250025 HD-UHD SAV 10010 HD-UHD SAV 10015 HD-UHD	303392	
3		SAV 100040 ND-MD SAV 10020 ND-MD	303393	
		SAV 250040 HD-UHD SAV 10020 HD-UHD	303398	
		SAV 100050 ND-MD	303395	1
		SAV 250050 HD-UHD	303396	

MC • Edition 2025.03 • No. 279 663 Rev. -4

^{*} The following replacements are valid for devices (FRM FRM-NOC, SAV) with a serial number ≥ than 10000 (see the type plate, e.g. 1PDK270290**S00010000)**



15. 3 Old spare parts for FRM-NOC and SAV produced until 08-2024

The following replacements are valid for devices (FRM FRM-NOC, SAV) with a serial number < than 10000 (see the type plate, e.g. 1PDK270290**S00001000)**

Specific adjustment range, underpressure W _{dsu}								
Spring	Order	Wire diameter	Length	Diameter	Setpoint range [mbar]			
colour	number	[mm]	[mm]	[mm]	ND	MD	UHD	
White	270353	1.2	60	10.0	10-32	-	-	
Yellow	270355	1.5	55	12.3	24-40	-	-	
Blue	270356	2.0	55	12.3	30-115	35-110	-	
Black	270357	2.3	55	12.3	-	50-250	-	
Purple	270358	2.5	55	12.3	-	80-400	150-500	
Orange	270359	2.8	55	12.3	-	-	300-1 000	
Silver	270360	3.0	60	15.0	-	-	800-1 400	
Pink	276126	3.5	60	15.0	-	-	1 200-3 000	

Specific adjustment range, overpressure W _{dso}								
Spring	Order	Wire diameter	Length	Diameter	Setpoint range [mbar]			
colour	number	[mm]	[mm]	[mm]	ND	MD	UHD	
Silver	270361	2.2	60	30.0	40-130	-	-	
Green	270366	2.5	60	30.0	60-190	180-290	-	
Red	270367	2.7	60	30.0	90-240	230-370	-	
Yellow	270368	3.2	60	30.0	-	300-500	-	
Blue	270369	3.5	60	30.0	-	400-800	500-1 000	
Black	270370	3.7	60	30.0	-	-	700-1 300	
Purple	270371	4.0	60	30.0	-	-	1 000-1 800	
Orange	270372	4.5	60	30.0	-	-	1 300-2 500	
Pink	270373	4.8	60	30.0	-	-	1 800-3 500	
White	271115	5.0	60	30.0	-	-	2 500-5 000	

Set	Spare part	Version	Item Nº	Spare part/ illustration
1	Kit Valve Seat orifices (5 pcs)	FRM-NOC10010/15 XX	287755	999
2	Kit valve seat orifices (4pcs)	FRM-NOC100025 XX	287756	666
3	Kit valve seat orifices (5pcs)	FRM-NOC10020/040XX	287757	666
4	Kit valve seat orifices (6 pcs)	FRM-NOC100050 XX	287758	99



15.4 Storage conditions

Basically, DIN 7716 (guidelines for storage, maintenance and cleaning of rubber products) applies to the storage of diaphragms and O-Rings.

The ageing process depends mainly on the following factors:

- Temperature
- Thermal radiation
- Solar radiation
- Humidity
- Relative humidity
- Ozone
- · Stress condition of the component


Proper storage

- Storage temperature between 5 °C and 20 °C
- No direct solar radiation
- No direct heat sources in the storage area
- No exposure to ozone
- Tension-free storage
- Storage in polyethylene bags
- Do not exceed the max. storage periods of 3 years.

16. Flow diagram

16.1 Flow diagrams AC 10 explanation

Flow diagram AC10: Please, refer to document number. 288127 "Flow diagrams FRM-NOC".

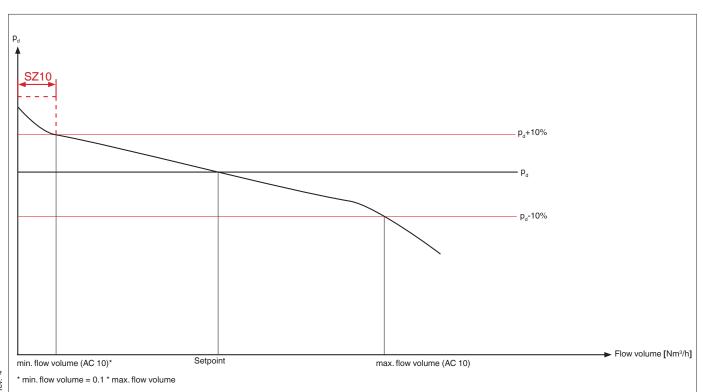



The maximum flow rate indicated refers to natural gas with a density of 0.81 kg/m³ or to the air with a density of 1.24 kg/m³ at 15 °C under normal conditions. In the case of different types of gases, a conversion of the volume flow according to the equation shown below is carried out.

°V _{gas used} =	$\overset{\circ}{V}_{air}xf$	Type of gas	Density		
				dv	f
			[kg/m³]		
	Specific mass of the air	Natural gas	0.81	0.65	1.24
	Spec. mass of the gas used	City gas	0.58	0.47	1.46
f =	\mathcal{A}	LPG	2.08	1.67	0.77
	V	Air	1.24	1.00	1.00

16.2 Flow volume coefficient of the valve K

Model	Thread	Ø6	Ø8	Ø10	Ø12	Ø14	Ø16	Ø20	Ø25	Ø30	Ø35
1", 1½"	M 22	34	61	87	115	144					
DN 25	M 30	34	61	87	115	144					
2", DN 40	M 45			105			279	396	546		
DN 50	M 56				151		282	412	575	737	900

The flow coefficient of the valve K_g of the FRM is equal to the flow rate with the actuator fully open, with an absolute inlet pressure of $p_{u,abs.} = 2,01325$ bar and an absolute outlet pressure of $p_{d,abs.} = 1.01325$ bar. The value K_g refers to natural gas with a relative density of d = 0.64, corresponding to a standard density of $p_n = 0.83$ kg/m³ and and a gas inlet temperature of t = 15 °C

The mass flow through a nozzle increases with a constant inlet pressure and a decrease in pressure after the nozzle, until it reaches its maximum when the pressure ratio is critical and thereafter remains constant. With constant outlet pressure, an additional increase in inlet pressure causes an increase in the mass flow through the regulator. For this reason, to calculate the mass flow that flows through a nozzle, two areas are distinguished:

a) sub-critical or critical relative pressure
$$\frac{p_{d,\,abs.}}{p_{u,\,abs.}} \ge 0,53$$

$$K_{g} = \frac{Q_{N}}{(p_{d}+1,013)^{*}(p_{u}-p_{d})}$$

Abbreviation	Description
p _d [bar]	Outlet pressure
p _{d, abs.} [bar]	Outlet pressure as absolute pressure (p _d +1,013)
p _u [bar]	Inlet pressure
p _{u, abs.} [bar]	Inlet pressure as absolute pressure (p _d +1,013)

b) super-critical relative pressure

$$\frac{p_{d, abs.}}{p_{d, abs}} < 0.53$$

$$K_{\rm g} = \frac{Q_{\rm N}^2}{(p_{\rm u} + 1,013)}$$





The Pressure Equipment Directive (PED) and the Energy Performance of Buildings Directive (EPBD) require a periodic inspection of heat generators in order to ensure a high degree of efficiency over a long term and, consequently, the least environmental pollution.

It is necessary to replace safety-relevant components after they have reached the end of their useful life:

Sicherheitsrelevante Komponente Safety relevant component Composant relatif à la sécurité Componenti rilevanti dal punto di vista della sicurezza	Konstruktionsbedingte Lebens Designed Lifetime Durée de vie prévue Durata di vita di progetto	Norm Standard Norme Norma	Dauerhafte Lagertemperatur Durable storage temperature		
	Zyklenzahl Operating cycles Cycle d'opération Numero di cicli di funzionamento di progetto	Jahre Years Année Anni		Température de stockage permanente Temperatura di stoccaggio permanente	
Ventilprüfsysteme / Valve proving systems / Systèmes de contrôle de vannes / Sistemi di controllo valvole	250 000	10	EN 1643		
Gas / Gas / Gas / Gas Druckwächter / Pressure switch / Manostat / Pressostati	50 000	10	EN 1854		
Luft / Air / Air / Aria Druckwächter / Pressure switch / Manostat / Pressostati	250 000	10	EN 1854		
Gasmangelschalter / Low gas pressure switch / Pressostat gaz basse pression / Pressostati gas di minima pressione	N/A	10	EN 1854		
Feuerungsmanager / Automatic burner control / Dispositif de gestion de chauffage / Gestione bruciatore	250 000	10	EN 298 EN 230		
UV-Flammenfühler¹ Flame detector (UV probes)¹ Capteur de flammes UV¹ Sensore fiamma UV¹	N/A	10 000 h³		045 °C	
Gasdruckregelgeräte¹ Gas pressure regulators¹ Dispositifs de réglage de pression du gaz¹ Regolatori della pressione del gas¹	N/A	15	EN 88-1 EN 88-2	32113 F	
Gasventil mit Ventilprüfsystem ² Gas valve with valve testing system ² Vanne de gaz avec système de contrôle de vanne ² Valvola del gas con sistema di controllo valvola ²	nach erkanntem after error deter après détection d dopo segnalazione	ction 'erreur	EN 1643		
Gasventil ohne Ventilprüfsystem ² Gas valve without valve testing system ² Vanne de gaz sans système de contrôle de vanne ² Valvola del gas senza sistema di controllo valvola ²	DN ≤ 25 200 000 25 < DN ≤ 80 100 000 80 < DN ≤ 150 50 000	10	EN 161		
Gas-Luft-Verbundsysteme / Gas-air ratio control system / Systèmes combinés gaz/air / Sistemi di miscelazione gas-aria	N/A	10	EN 88-1 EN 12067-2		

Nachlassende Betriebseigenschaften wegen Alterung / Performance decrease due to ageing /

Lagerzeiten / Storage times / Périodes de stockage / Tempi di stoccaggio

Lagerzeiten ≤ 1 Jahr verkürzen nicht die konstruktionsbedingte Lebensdauer.

Storage time ≤ 1 year does not reduce the designes lifetime.

Les périodes de stockage ≤ 1 an ne réduisent pas la durée de vie liée à la conception.

I tempi di stoccaggio ≤ 1 anno non riducono la durata di vita legata al design.

DUNGS empfiehlt eine maximale Lagerzeit von 3 Jahren.

DUNGS recommends a maximum storage time of 3 years.

DUNGS recommande une durée de stockage maximale de 3 ans.

DUNGS raccomanda un tempo massimo di stoccaggio di 3 anni.

We reserve the right to make modifications in the course of technical development.

Réduction de performance due au viellissement / Riduzione delle prestazioni dovuta all'invecchiamento

Gasfamilien II, III / Gas families II, III / Familles de gaz II, III / per i gas delle famiglie II, III

Betriebsstunden / Operating hours / Heures de service / Ore di esercizio

N/A nicht anwendbar / not applicable / ne peut pas être utilisé / non può essere usato



Head of office and factory

Karl Dungs GmbH & Co. KG Karl-Dungs-Platz 1 73660 Urbach, Germany Phone +49 7181-804-0 Fax +49 7181-804-166 e-mail: info@dungs.com Internet: www.dungs.com