



### Installation and operating instructions

gas control valve SVG



### Schimpf Ex & Gas GmbH

Bonholzstraße 17 71111 Waldenbuch

Tel.: +49 (0)7157 52756-0 Fax: +49 (0)7157 52756-99 E-Mail: Info@Schimpf-ex-gas.de Web: www.Schimpf-ex-gas.de



Antriebs- & Regeltechnik Schimpf GmbH
Bonholzstraße 17
71111 Waldenbuch

Tel.: +49 (0)7157 52756-0 Fax: +49 (0)7157 52756-99 E-Mail: Info@Schimpf-Antriebe.de Web: www.Schimpf-Antriebe.de Schimpf Ex & Gas GmbH claims copyright protection for this documentation.

This documentation may not be modified, extended, reproduced or passed on to third

parties without the prior consent of Schimpf Ex & Gas GmbH. Please contact Schimpf

Ex & Gas GmbH for more information.

This documentation includes specifications for the relevant products but does not

guarantee that they have any particular properties. We reserve the right to make

changes to reflect technological advances.

Edition: 02/2023

Liability and guarantee

Schimpf Ex & Gas GmbH accepts no liability or guarantee whatsoever in the event of

the improper installation or use of the control valves. The technical specifications and

safety instructions provided by us must be observed.

### Safety instructions for maintenance and installation



 The control valve may only be installed, maintained and commissioned by qualified specialists!



 Before installing or maintaining the control valve, all affected devices/machines/systems must be switched off! The gas supply must be disconnected!



• Before switching off devices/machines/systems, it is important to check that it is safe to do so.



 Make sure that no danger to people, the environment and devices/machines/systems can result from installation or maintenance work!



• Make sure that there is no risk of crushing between the valve housing and the valve blade!



- The control valve may only be repaired by the manufacturer.
- Shutdowns may only be carried out after prior consultation with the plant manager, shift supervisor or safety engineer!
- Malfunctions must be reported immediately to the plant manager, shift supervisor or safety engineer in order to avoid danger!
- When installing or maintaining the control valve, the applicable safety and accident prevention regulations of the employers' liability insurance association must be observed!
- Before installing an actuating drive, check that the control valve is moving freely!
- Before installing/maintaining the control valve, make sure that the safety devices are functioning correctly!
- After completing the installation, check whether the settings on the drive correspond to the mechanical position of the control valve! This applies in particular to the end positions!

 Permissible settings for the control valve must be implemented in accordance with the operating instructions of the gas consumption device.



 The screw plug on the underside of the valve must not be opened or adjusted. Make sure that the sealant on the screw plug is intact. If there is visible damage to the sealant, the control valve may no longer be used and must be serviced by the manufacturer.



• A leak test and function check must be carried out after any work on the control valve.

### **Device safety**



- In order to keep the control valve in a safe condition, it is imperative that installers/users strictly adhere to the manufacturer's instructions in this documentation and have the appropriate professional qualifications.
- The control valves may only be used for their intended purpose!
- The control valve may only be operated with an actuating mechanism intended for this purpose (actuator, hand lever, etc.).
- The control valve may only be operated in accordance with the values specified in the technical specifications!
- The control valve must not be installed, commissioned or adjusted on damaged supply lines or flanged system parts! The same requirements apply to damaged actuating drives!



Take care when touching the surfaces of the control valve. Danger
of burns or frostbite. Depending on the permissible media
temperature, the surfaces of the control valves can become hot or very
cold. The operator must ensure that the necessary protection
against contact is provided.

### Function and intended use


The SVG gas control valves are used to adjust the gas supply to gas-consuming devices. For greater accuracy, the SVG control valves can be used with reduced nominal width (reduced by one or two nominal widths). This removes the need for reducers.

The desired flow rate is set by setting the opening angle of the valve between 0° and 90°.

The control valves contain a smooth-running, swing-through valve disc. The valve disc is also available with an optional swing-through sealing system to reduce the minimum flow rate when the valve is closed.

Important:

The control valves are not designed to securely stop the gas supply.

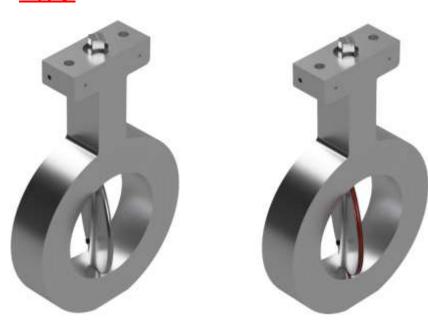

Gas control valve SVG without or with sealing system

### Approval

EU type examination certificate **no. C5A 116408 0001** in accordance with EU Regulation 2016/426 (Regulation on appliances burning gaseous fuels)

UK type examination certificate **no. C5AUK 116408 0002** in accordance with "Gas Appliances (Enforcement) and Miscellaneous Amendment Regulations, UKSI 2018:389 (as amended by UKSI 2019:696)"

### Hydrogen

According to report **no. V 1742-00/22** of 12/01/2022, carried out by " TÜV SÜD Industrie Service GmbH; Abteilung Feuerungs- und Wärmetechnik, Prüfbereich Sicherheits-, Kontroll- und Regeleinrichtungen", the butterfly valves of the SVG series are also suitable for natural gas-hydrogen mixtures and hydrogen as a flow medium under the operating conditions specified there.

### Installation

### **Steps**




The "Safety instructions for maintenance and installation" and the "Installation instructions" listed in this document must be observed when installing the control valve.

- 1. Before installing the control valve, all affected devices/machines/systems must be switched off and, if necessary, disconnected from mains power! The gas supply must be disconnected!
- 2. Insert lower stud bolts (PN 10-40: use plastic sleeves)
- 3. Insert flange gaskets
- 4. Insert control valve. Install in a permitted position
- 5. Insert remaining stud bolts
- 6. Tighten all bolts properly
  - Tighten bolts crosswise (select tightening torques according to the relevant standards and guidelines for flange connections)
  - Ensure the control valve is installed centrally
  - Ensure that no mechanical stress is applied during installation
  - Observe the relevant standards and guidelines for flange connections as well as the installation instructions for the flange connections/flange gaskets used.
- 7. A leak test and function check must be carried out after the installation of the control valve.


Follow the **instructions of the relevant manufacturer** when connecting and installing the actuating drive. The valve position must be checked.

### **Installation instructions**


- Avoid direct contact between the control valve and masonry, concrete walls or floors.
- Make sure that the control valve is installed in a position which is not exposed to vibrations.
- Permissible installation positions (the requirements for the actuating drive must also be observed):

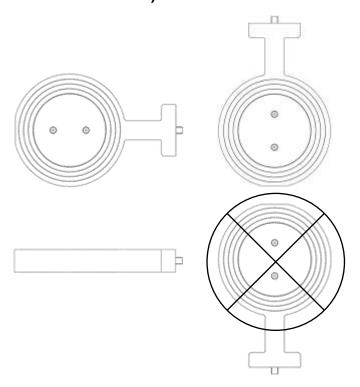

• Observe the valve position by means of the marking on the square spindle:

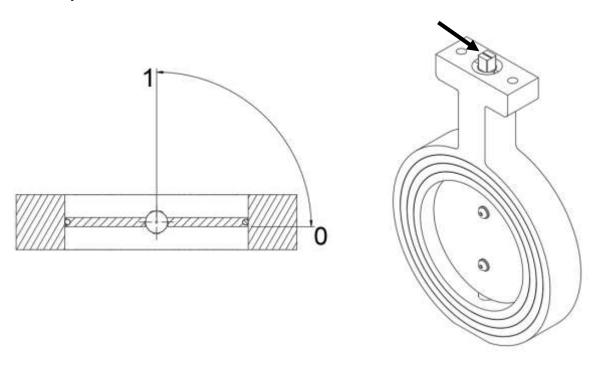

Using the centring aids (plastic sleeves) (only for PN10 - PN40 and M16 screws):

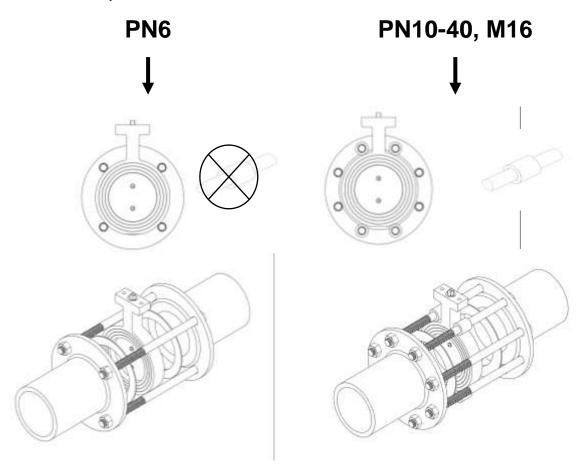

Installation of a Schimpf actuating drive:



To mount a Schimpf drive on the control valve, insert the square spindle at end of the valve shaft into the square socket of the drive. Make sure that the square socket of the drive and the square spindle of the valve are the same size. The valve is fixed in place using the two hexagon socket screws supplied with the valve. When installing, make sure that the drive is in the correct position relative to the valve (open or closed).

### Flow rate

### Selection of the nominal size

The appropriate nominal size can be determined either by calculation using the  $k_v$  values from the following table or with the aid of the following diagrams.

The following formula should be used for the calculation (subcritical flow):

$$Q_{N} = 514 \bullet k_{V} \bullet \sqrt{\frac{\Delta p \bullet p_{2}}{\rho_{N} \bullet T}}$$

 $Q_N = \text{flow rate in } m^3/h$ 

 $k_v = flow coefficient in m^3/h$ 

 $\Delta p$  = differential pressure across valve in bar

p2 = pressure after valve in bar, absolute

 $\rho_N$  = standard density of the gas in kg/ m<sup>3</sup>

T = gas temperature in kelvin

When selecting a valve, the leakage rate with the valve closed (0°) must also be taken into account. The maximum permissible parameters for operating pressure and differential pressure must also be observed. For optimum control, a differential pressure greater than 10 mbar should be maintained.

The data provided here were obtained on the basis of laboratory measurements (medium: air, 15°, 1013 mbar). Actual values may differ, depending on the on-site conditions.

### k<sub>v</sub> values

Data in m<sup>3</sup>/h

### Inner diameter matches nominal diameter, non-sealing

Туре	Inner- diameter		valve position								
	(mm)	0°	10°	20°	30°	40°	50°	60°	70°	80°	90°
DN40	40	0,2	1,1	3,4	8,2	14,0	23,3	36,9	55,1	68,2	75,2
DN50	50	0,3	1,7	5,5	12,8	23,9	41,0	65,0	101,1	132,9	155,0
DN65	65	0,5	2,9	10,3	22,9	43,0	73,4	115,9	183,2	250,8	305,0
DN80	80	0,8	4,4	17,1	36,9	67,3	113,1	177,3	280,9	393,5	491,1
DN100	100	1,1	6,8	29,3	61,5	107,8	177,2	275,6	435,5	622,5	795,7
DN125	125	1,5	10,4	49,6	102,0	171,3	275,4	424,7	668,0	970,8	1267,0
DN150	150	1,8	14,9	75,5	153,2	249,1	393,6	602,9	944,2	1388,2	1839,0

### Inner diameter matches nominal diameter, sealing

Туре	Inner- diameter		valve position								
	(mm)	0°	10°	20°	30°	40°	50°	60°	70°	80°	90°
DN40	40	0,02	0,4	3,1	6,0	11,3	19,8	32,0	49,7	62,6	69,6
DN50	50	0,02	0,7	4,1	10,6	21,8	37,7	59,5	94,6	125,2	146,3
DN65	65	0,03	1,4	7,5	20,9	41,7	70,8	110,3	175,8	240,6	292,1
DN80	80	0,04	2,2	13,2	35,0	66,6	111,1	172,5	273,6	381,8	474,7
DN100	100	0,05	3,7	24,4	59,8	107,5	176,2	273,1	430,1	610,0	775,5
DN125	125	0,06	6,1	44,0	100,4	171,1	275,8	427,5	667,5	959,5	1243,7
DN150	150	0,08	9,2	69,9	151,8	248,6	395,5	613,5	951,4	1380,4	1814,2

### Single reduction in nominal width, non-sealing

Туре	Inner- diameter		valve position								
	(mm)	0°	10°	20°	30°	40°	50°	60°	70°	80°	90°
DN40/32	40	0,1	1,0	2,9	5,4	10,2	16,9	24,9	32,9	38,8	42,5
DN50/40	50	0,2	1,2	3,8	7,9	17,3	29,3	42,2	53,6	61,5	66,4
DN65/50	65	0,2	1,6	5,9	14,0	30,1	49,7	70,6	89,0	101,9	109,9
DN80/65	80	0,4	2,4	9,9	29,9	57,5	90,5	127,0	162,3	187,6	203,5
DN100/80	100	0,5	4,3	21,4	53,5	94,2	143,6	200,2	259,6	303,2	331,0
DN125/100	125	0,8	8,2	45,0	97,2	158,0	233,4	323,7	426,7	504,0	553,7
DN150/125	150	1,1	15,2	87,6	171,5	261,6	376,3	519,9	695,8	830,0	917,0

### Single reduction in nominal width, sealing

Туре	Inner- diameter	00	valve position								
	(mm)	0°	10°	20°	30°	40°	50°	60°	70°	80°	90°
DN40/32	40	0,02	0,4	2,1	4,2	8,4	14,3	21,6	29,7	35,6	39,2
DN50/40	50	0,02	0,5	2,8	6,5	15,8	27,0	38,7	49,8	58,7	65,1
DN65/50	65	0,03	0,8	4,3	12,8	29,1	47,9	67,1	85,1	98,7	107,8
DN80/65	80	0,04	1,2	7,6	28,3	56,6	89,0	123,5	157,6	183,1	199,5
DN100/80	100	0,04	2,4	17,8	52,0	93,5	143,0	198,4	255,9	298,1	324,5
DN125/100	125	0,05	4,8	39,9	95,8	157,5	232,5	320,8	424,4	499,1	542,9
DN150/125	150	0,06	9,4	81,1	170,0	260,9	374,8	515,3	685,9	816,3	899,0

### Two reductions in nominal width, non-sealing


Туре	Inner- diameter		valve position								
	(mm)	0°	10°	20°	30°	40°	50°	60°	70°	80°	90°
DN40/25	40	0,1	0,3	1,3	2,7	4,9	7,6	10,7	13,4	15,4	16,7
DN50/32	50	0,1	0,6	2,0	4,1	7,5	12,6	19,2	25,8	30,7	33,9
DN65/40	65	0,2	0,9	3,6	7,7	13,8	22,4	33,5	45,1	53,4	58,6
DN80/50	80	0,2	1,5	6,8	15,2	26,2	40,7	58,5	76,9	89,6	97,0
DN100/65	100	0,3	2,5	14,2	32,5	54,6	80,9	110,5	140,7	160,2	170,6
DN125/80	125	0,4	3,8	24,7	57,3	94,7	136,2	180,0	223,8	250,4	263,2
DN150/100	150	0,6	5,9	43,5	101,8	166,5	233,7	300,0	364,6	401,0	416,2

### Two reductions in nominal width, sealing


					•						
Туре	Inner- diameter		valve position								
	(mm)	0°	10°	20°	30°	40°	50°	60°	70°	80°	90°
DN40/25	40	0,01	0,1	1,0	2,0	4,0	6,4	9,3	12,0	14,4	16,4
DN50/32	50	0,02	0,2	1,5	3,4	6,9	11,6	17,6	24,0	29,2	33,2
DN65/40	65	0,02	0,4	2,6	7,0	13,3	21,6	31,9	43,1	51,6	57,4
DN80/50	80	0,03	0,7	5,3	14,4	25,8	40,0	56,8	74,7	87,3	95,1
DN100/65	100	0,04	1,4	11,8	31,6	54,3	80,5	109,5	138,8	157,4	167,3
DN125/80	125	0,04	2,2	21,9	56,4	94,6	135,6	178,4	222,7	247,7	258,0
DN150/100	150	0,05	3,7	40,3	100,9	166,4	232,6	297,3	359,6	394,1	408,0

### Flow curves


### Inner diameter matches nominal size, non-sealing

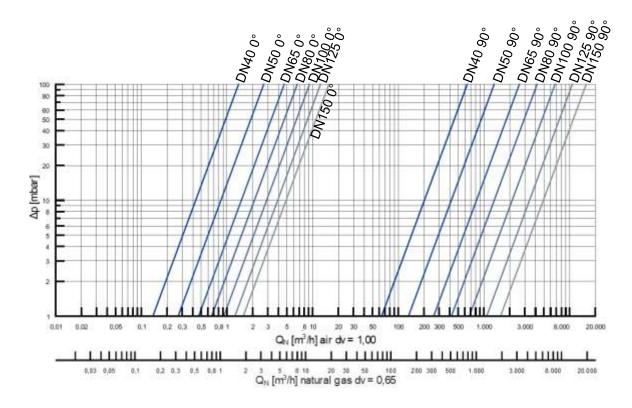


### Inner diameter matches nominal diameter, sealing

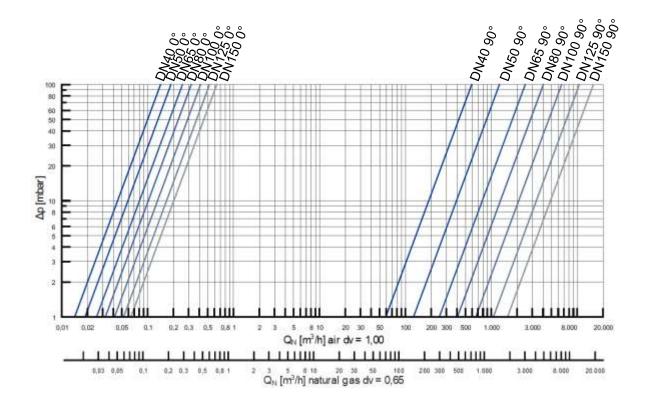


### Single reduction in nominal width, non-sealing

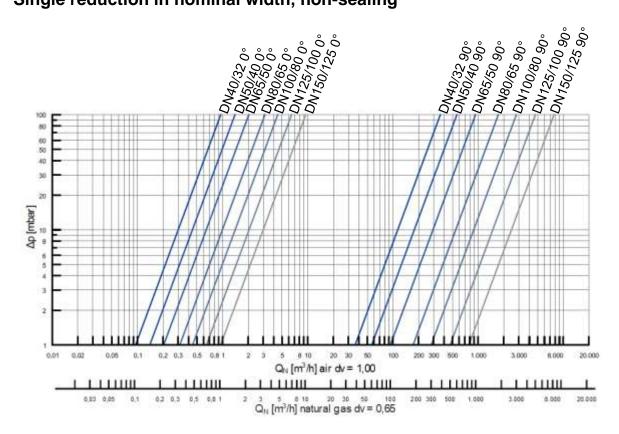


### Single reduction in nominal width, sealing

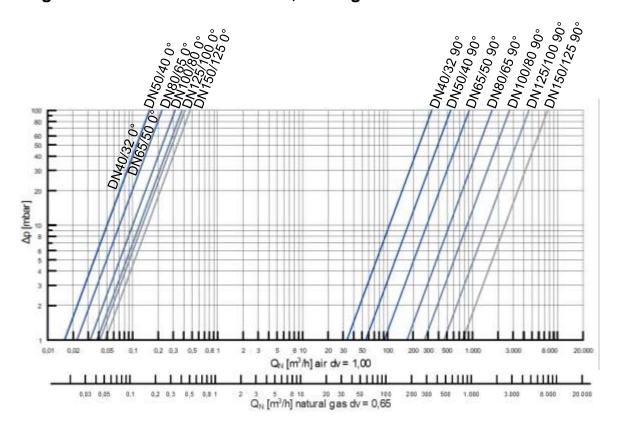

### Two reductions in nominal width, non-sealing

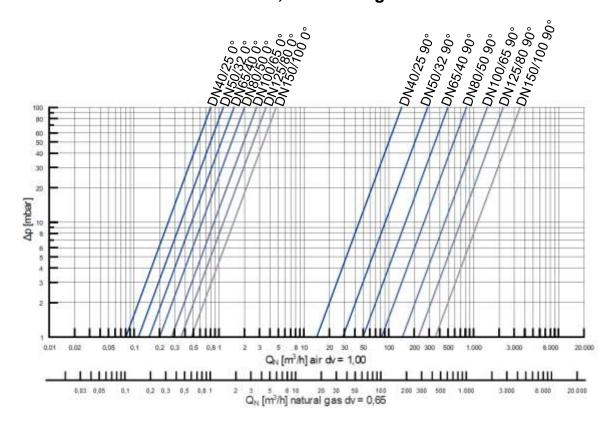

### Two reductions in nominal width, sealing

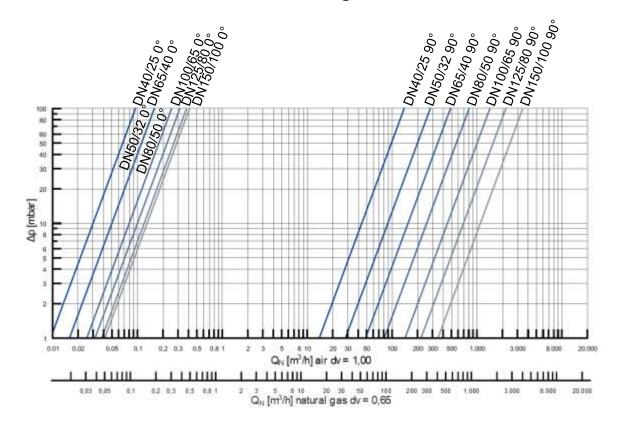

### Selection

### **Options**

### Valve disc

The valve disc of all valves is a swing-through type. To reduce the minimum flow rate when the valve is closed, the valve disc is also available with an integrated sealing system.

### **Actuation**

All valves are equipped with an external square for easy mounting of a Schimpf actuator or a hand lever.

By means of an optional **hand lever**, volumetric flows of 0°-90° can be continuously adjusted and fixed. The setting angle can be read off a scale.

Customised shaft end forms and adapter sets for other actuators are also available.

### **Housing material**

All valves are available with either aluminium or stainless-steel housings.


### **Overall length**

All valves with aluminium housing are optionally available in lengths of 30 mm and 40 mm. All valves with a stainless steel housing are only possible with a length of 30 mm.

### Protective earth

The valve can be supplied with a screw connection (M4) on the connector for a protective conductor.

### **SVG** dimensions

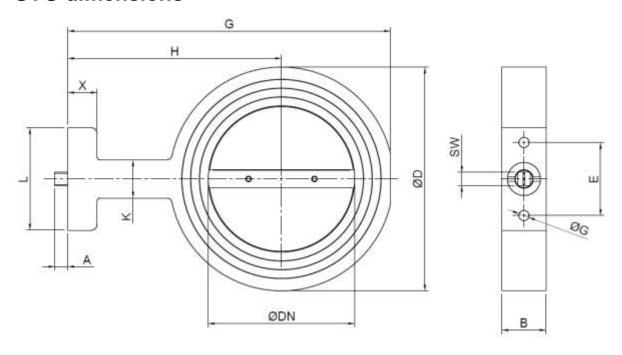

Туре	DN40	DN50	DN65	DN80	DN100	DN125	DN150
	mm	mm	mm	mm	mm	mm	mm
ØDN –	40	50	65	80	100	125	150
Inner diameter*	(32/25)*	(40/32)*	(50/40)*	(65/80)*	(80/65)*	(100/80)*	(125/100)*
ØD - Outer diameter	87	97	117	133	153	183	208
G - Overall height	155	165	182.5	200.5	220.5	248	273
H - Centre of fitting to top of neck	113.5	118.5	126	136	146	158.5	171
X - Connector height	20	20	20	20	20	20	20
L - Connector width	70	70	70	70	70	70	70
K - Central bar width	26	26	26	26	26	26	26
B - Overall length**	30/40	30/40	30/40	30/40	30/40	30/40	30/40
A - Height of square spindle	9	9	9	9	9	9	9
SW - Width across flats of square spindle	9	9	9	9	9	9	9
E - Hole spacing	50	50	50	50	50	50	50
ØG - Hole diameter	7	7	7	7	7	7	7

<sup>\*</sup> Inner diameter can be reduced by one or two nominal diameters
\*\* Overall length is possible in 30 or 40 mm length, stainless steel only length 30

### Weight of SVG

### **Aluminium housing**

Туре	<b>DN40</b> ~ kg	<b>DN50</b> ~ kg	<b>DN65</b> ~ kg	<b>DN80</b> ~ kg	<b>DN100</b> ~ kg	<b>DN125</b> ~ kg	<b>DN150</b> ~ kg
Standard Overall length 30 mm	0.7	0.8	1	1.2	1.45	1.9	2.3
Single reduction in nominal width Overall length 30 mm	0.75	0.82	1.1	1.3	1.55	2.05	2.5
Two reductions in nominal width Overall length 30 mm	0.8	0.85	1.15	1.3	1.6	2.15	2.7
Standard Overall length 40 mm	0.85	1	1.25	1.5	1.8	2.3	2.75
Single reduction in nominal width Overall length 40 mm	0.9	1.05	1.4	1.6	1.9	2.6	3
Two reductions in nominal width Overall length 40 mm	1	1.1	1.45	1.7	2	2.75	3.4

### Stainless steel housing

Туре	<b>DN40</b> ~ kg	<b>DN50</b> ~ kg	<b>DN65</b> ~ kg	<b>DN80</b> ~ kg	<b>DN100</b> ~ kg	<b>DN125</b> ~ kg	<b>DN150</b> ~ kg
Standard Overall length 30 mm	1.75	2	2.5	3	3.4	4.4	5.2
Single reduction in nominal width Overall length 30 mm	1.8	2.1	2.8	3.25	3.85	5.2	6.1
Two reductions in nominal width Overall length 30 mm	1.95	2.2	2.9	3.5	4.2	5.8	7

### Type code

Code*	Description
SVG	Control valve for gas
40-150	Nominal size DN
/25-/125	Reduced to nominal size DN
D	Sealing
E	Stainless steel housing
Н	With manual adjustment
V	With square spindle
B30/B40	Overall length 30 or 40 mm

<sup>\*</sup>Other supplementary code numbers are possible depending on optional customerspecific variations

Example for gas valve DN 65, reduced to DN 50, sealing with square, overall length 30 mm: **SVG** 65/50 **D V B30** 

### Maintenance and service life

Important:

The "Safety instructions for maintenance and installation" must be observed during all maintenance work.

The SVG control valve requires little maintenance but must be checked regularly by qualified personnel to ensure it is working properly. We recommend inspecting the control valve once a year (every six months when used with biogas) to check the tightness of the seal and determine whether the valve is functioning as intended. The intervals for regular inspections must be set by the operator depending on the operating conditions.

The SVG control valve is designed to have a service life of 10 years.

When this period is over, the control valve must be inspected in detail by qualified specialists, serviced by the manufacturer or replaced.

### Technical specifications

DN: 40 to 150, reduction by 2 nominal sizes possible. Gas type: For gases of gas families 1, 2, 3 and other neutral

gaseous media.

Natural gas-hydrogen mixtures and hydrogen\*

Biogas (stainless steel version).

Suitable for gases up to max. 0.1% H<sub>2</sub>S by volume. The gas must be dry under all conditions and must not

condense.

Housing: Aluminium or stainless steel

Shaft: Stainless steel
Valve disc: Stainless steel
Bolts (valve disc): Stainless steel
Washers (valve disc): Steel, galvanised
Screw plug: Stainless steel

Seals: NBR

Operating pressure: Max. 50 kPa (500 mbar)

Drive adaptation: square spindle 9\*9 mm, others available on request

Flange: EN 1092-1
Ambient temperature: -20 to +70°C
Medium temperature: -20 to +70°C

Maximum permissible

positioning speed: 5s/90°

<sup>\*</sup> According to report **no. V 1742-00/22** of 12/01/2022, carried out by "TÜV SÜD Industrie Service GmbH; Abteilung Feuerungs- und Wärmetechnik, Prüfbereich Sicherheits-, Kontroll- und Regeleinrichtungen", the butterfly valves of the SVG series are also suitable for natural gas-hydrogen mixtures and hydrogen as a flow medium under the operating conditions specified there.

### **EU Declaration of Conformity**



### EU-Konformitätserklärung

EU Declaration of Conformity Déclaration de Conformité UE

Wir

Schimpf Ex & Gas GmbH, Bonholzstrasse 17, D-71111 Waldenbuch

We / Nous

erklären, dass das Produkt alle Regelklappen der Serie SVG

declare that product / déclarons que produit

auf welche sich diese Erklärung bezieht, mit den folgenden Norm(en) übereinstimmt

to which this declaration relates conforms to the following standard(s)

sur laquelle cette déclaration se réfère, et conformément aux dispositions de la norme(s)

DIN EN 13611:2019 DIN EN 161:2013

gemäß den Bestimmungen der folgenden Richtlinie(n).

according to the provisions of the following directive(s) / conformement aux dispositions de la directive(s)

Nummer (Number / Numéro)

Text (Text / Texte)

2016/426/EU

Verordnung über Geräte zur Verbrennung gasförmiger Brennstoffe

2016/426/FU

2016/426/UE

Regulation on appliances burning gaseous fuels Réglement concernant les appareils brûtant des combustibles gazeux

Das Datenblatt und gegebenenfalls die Basisdokumentation sind zu beachten.

The data sheet and basic documentation, if any, have to be considered.

La consultation de la fiche technique, et éventuellement de la documentation technique de base, est requise

EU-Baumusterprüfung

EU-Type Examination examen UE de type

Zertifikatsnummer

Certificate number Numéro de certificat

Gültigkeitsdauer

Validity period Durée de validité

Notifizierte Stelle

Notified Body Organisme notifié (2016/426/EU)

Überwachungsverfahren

Surveillance procedure Procédure de surveillance (2016/426/EU)

Rechtsverbindliche Unterschrift

Authorized signature / Signature autorisée

C5A 116408 0001

2032-03-29

TÜV SÜD Product Service GmbH

D-80339 München

Notified Body number: 0123

TÜV SÜD Product Service GmbH

Ridlerstraße 65 D-80339 München Notified Body number: 0123

Anbringung der CE-Kennzeichnung:

Placing of the CE marking / L'apposition du marquage CE

Waldenbuch, 08.04.2022

N. Geiger, Seschäftsführung Gas GmbH

Bonholzstr. 17 71111 Waldenbuch

Telefon 07157/52756

### **UK Declaration of Conformity**



### UK-Konformitätserklärung

UK Declaration of Conformity Déclaration de Conformité UK

Wir Schimpf Ex & Gas GmbH, Bonholzstrasse 17, D-71111 Waldenbuch

We / Nous erklären.

dass das Produkt

declare that product / declarons que produit

alle Regelklappen der Serie SVG

ail control valves of the SVG series / tous les volets de régulation de la série SVG

auf welche sich diese Erklärung bezieht, mit den folgenden Norm(en) übereinstimmt

to which this declaration relates conforms to the following standard(s)

sur l'aquelle cette déclaration se référe, et conformément aux dispositions de la norme(s)

DIN EN 13611:2022 DIN EN 161:2013

gemäß den Bestimmungen der folgenden Richtlinie(n).

according to the provisions of the following directive(s) / conformément aux dispositions de la directive(s)

Gas Appliances (Enforcement) and Miscellaneous Amendment Regulations, UKSI 2018:389 (as amended by UKSI 2019:696)

Das Datenblatt und gegebenenfalls die Basisdokumentation sind zu beachten.

The data sheet and basic documentation, if any, have to be considered.

La consultation de la fiche technique, et éventuellement de la documentation technique de base, est requise

**UK-Baumusterprüfung** 

UK-Type Examination examen UK de type

Zertifikatsnummer

Certificate numbe Numéro de certificat

Gültigkeitsdauer

Validity period Durée de validité

Notified Body Organisme notifié

Notifizierte Stelle TUV SUD BABT Unlimited

Octagon House, Concorde Way, Segensworth North,

Fareham, Hampshire, PO15 SRL Notified Body number: 0168

C5AUK 116408 0002

Überwachungsverfahren

TUV SUD BABT Unlimited Octagon House, Concorde Way, Segensworth North, Surveillance procedure

2032-07-31

Procédure de surveillance

Fareham, Hampshire, PO15 SRL Notified Body number: 0168

Anbringung der UKCA-Kennzeichnung:

ja, yes, oui

Placing of the UKCA marking / L'apposition du marquage UKCA

Waldenbuch, 09.11.2022

N. Geiger, Geschäftsführer Meraguy Directeur general Bonholzstr. 17

Rechtsverbindliche Unterschrift Authorized signature / Signature autorisée

71111 Waldenbuch Telefon 07157/52756-0

© Schimpf Ex & Gas GmbH

# ZERTIFIKAT

### EU-Type examination certificate



### **EU-Type Examination Certificate**

No. C5A 116408 0001 Rev. 01

Holder of Certificate: Schimpf Ex & Gas GmbH

Bonholzstraße 17 71111 Waldenbuch GERMANY

Product: Fittings (Gas)

Throttle valve

SVG

PIN CE-0123DM1078

The Certification Body of TÜV SÜD Product Service GmbH confirms according to Annex III (Module B) that the listed product complies with the relevant provisions according to Annex I of Regulation (EU) 2016/426 on appliances burning gaseous fuels. It refers only to the sample submitted for testing and certification and on its technical documentation. For details see: www.tuvsud.com/ps-cert

Test report no .: V 1672-00/22

Valid until: 2032-03-29

Date, 2022-04-05

( Johannes Steiglechner )

TÜV SÜD Product Service GmbH is Notified Body according to Regulation (EU) 2016/426 on appliances burning gaseous fuels with identification No. 0123.

TÜV SÜD Product Service GmbH • Certification Body • Ridlerstraße 65 • 80339 Munich • Germany

TÜV®

## ZERTIFIKAT

### **UK-Type examination certificate**







### Type Examination Certificate

No. C5AUK 116408 0002 Rev. 00

**Holder of Certificate:** Schimpf Ex & Gas GmbH

Bonholzstraße 17 71111 Waldenbuch GERMANY

Product: Fittings (Gas)

Throttle valves

SVG

The Approved Body of TUV SUD BABT Unlimited confirms according to the Gas Appliances (Enforcement) and Miscellaneous Amendment Regulations, UKSI 2018:389 (as amended by UKSI 2019:696), that in the conformity assessment procedure in accordance with Article 14 the listed product has been assessed in a type examination (module B - production type) and complies with the relevant provisions according to Annex I on appliances burning gaseous fuels. It refers only to the sample submitted for testing and certification and on its technical documentation. See also notes overleaf.

Test report no .: V 1713-00/22

Valid until: 2032-07-31

Date, 2022-08-11

( Johannes Steiglechner )

Approved Body according to Regulation (EU) 2016/426 and the Gas Appliances (Enforcement) and Miscellaneous Amendments Regulations 2018 with identification No. 0168.

TUV SUD BABT Unlimited, Octagon House, Concorde Way, Segensworth North, Fareham, Hampshire, PO15 SRL TUV®